

Payment Kiosk

Create a immersive experience with this interactive Kiosk. Ideal for resturants with a built in thermal printer and barcode scanner



Note: Product design specifications including dimensions are subject to change without notice & may vary from those shown. Please call us for the most up to date specifications and dimensions.



For more exciting multitouch products visit
www.promultis.info
or call +44 (0) 239 251 2794



Getting Started

Included in your product box:



Remote Control



Promultis Manual



AC Power Supply



Kiosk Keys



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



Starting the Payment Kiosk

Start the device

- 1) Plug the power cable into the Kiosk and at the wall socket.
- 2) Ensure that the rocker switch on the unit is switched on as well as at the wall socket.
- 3) If you have purchased a PC, the PC should automatically switch on and boot into Windows OS.
- 4) If you have an Android OS only Payment Kiosk, it will boot into the Android home page

Troubleshooting

If the screen doesn't automatically turn on, take the TV remote and point it to the bottom right of the screen and press the power button.

If the Payment Kiosk doesn't automatically boot into windows OS (and you have purchased a PC with the Kiosk), swipe in from the left or right edge of the screen when the Android OS is fully loaded up and press the Windows Icon.

PC Access



To access the PC, locate the keys provided in the product bag. Use them to unlock both the top¹ and bottom² locks. Once unlocked, carefully open the payment kiosk screen to reveal the PC compartment. From here, you can proceed with any required maintenance or configuration.



[promultis]

For more exciting multitouch products visit


www.promultis.info

or call +44 (0) 239 251 2794



Connectivity

On the bottom of the screen are several connections:

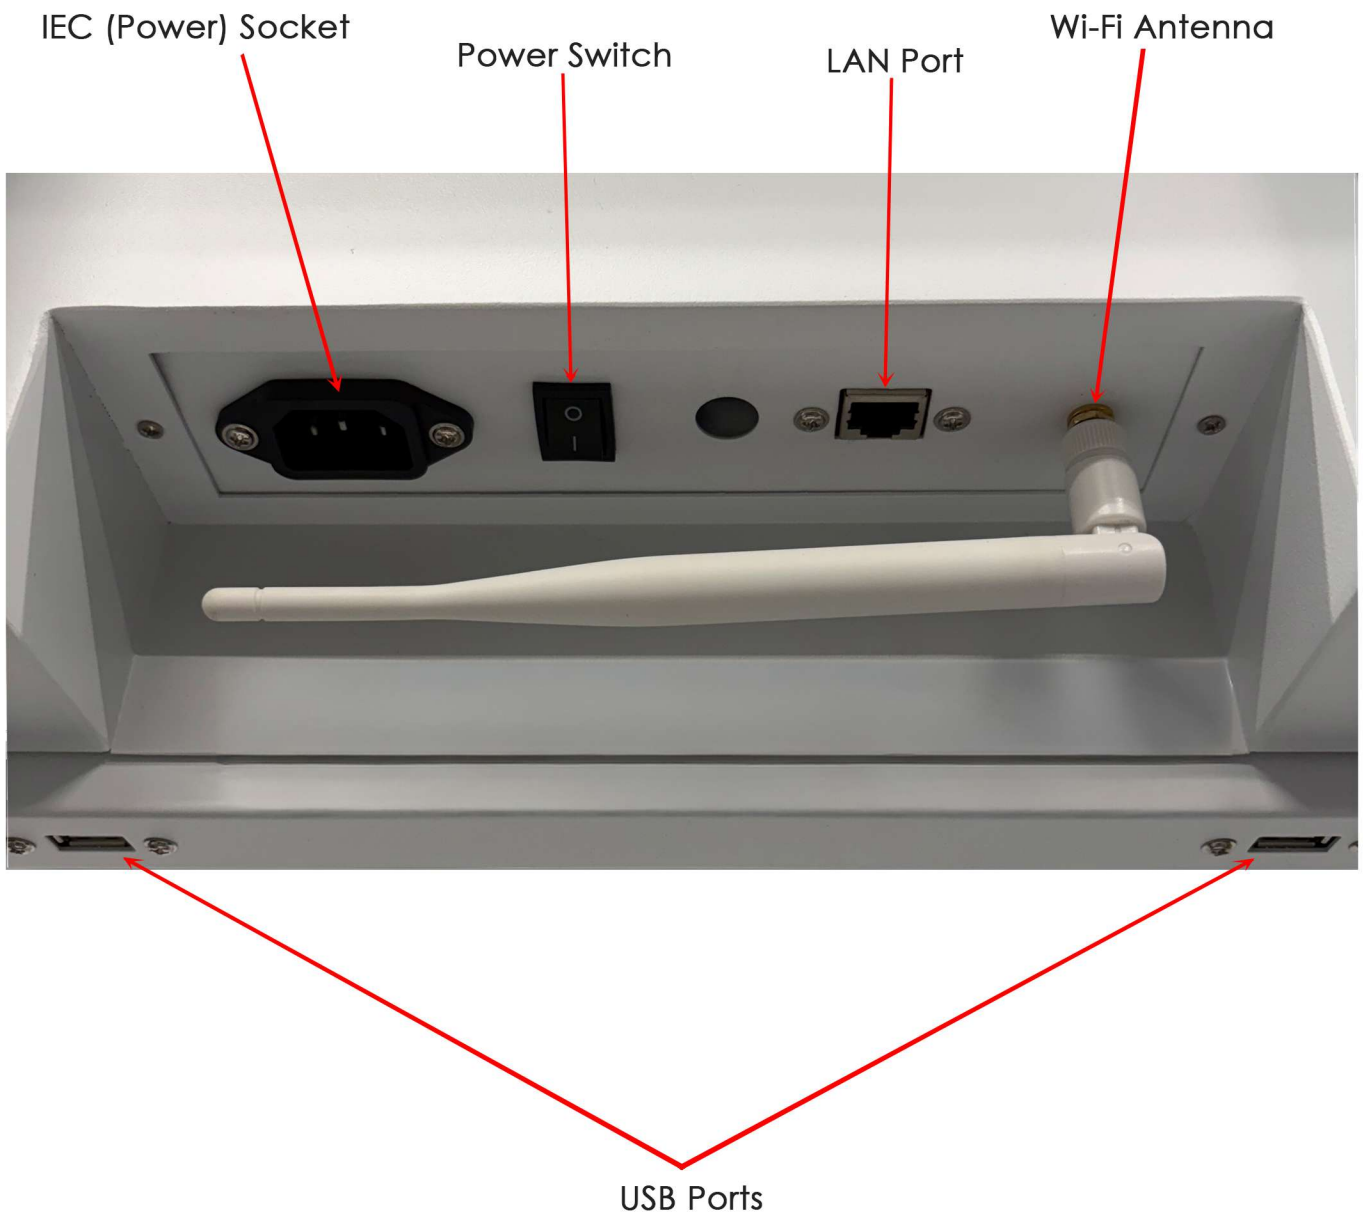


[promultis]

For more exciting multitouch products visit
www.promultis.info
or call +44 (0) 239 251 2794



Apps


Swiping up from the Home screen opens the full App Drawer, displaying all installed applications. The available apps include Calculator, Calendar, Camera, Chrome, Clock, Google Drive, File Explorer, Gmail, Google, Google TV, HDMI-IN, Notes, Google Maps, Google Meet, Photos, Play Store, Unity Media Player, Print USB, Settings, Sound Recorder, UC Browser, Video, YouTube, and YouTube Music.

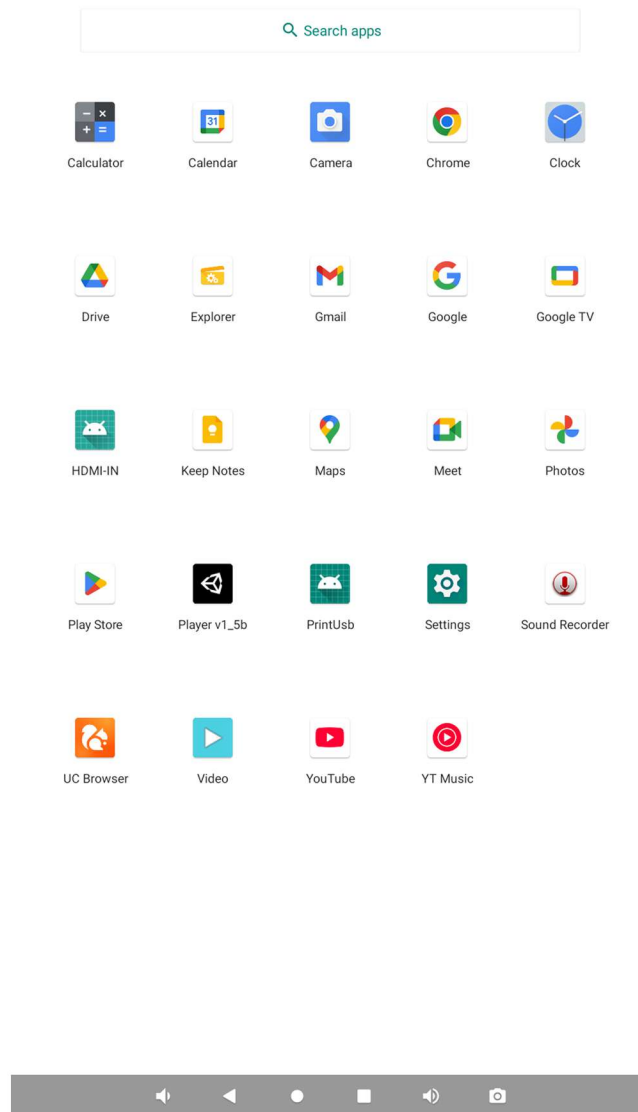

Swipe down anywhere on the screen to close the App Drawer and return to the Home screen.

Settings – Network

The Network & Internet section allows you to manage all connectivity options, including Wi-Fi, Airplane Mode, Ethernet, Hotspot & Tethering, Data Saver, VPN, and Private DNS.

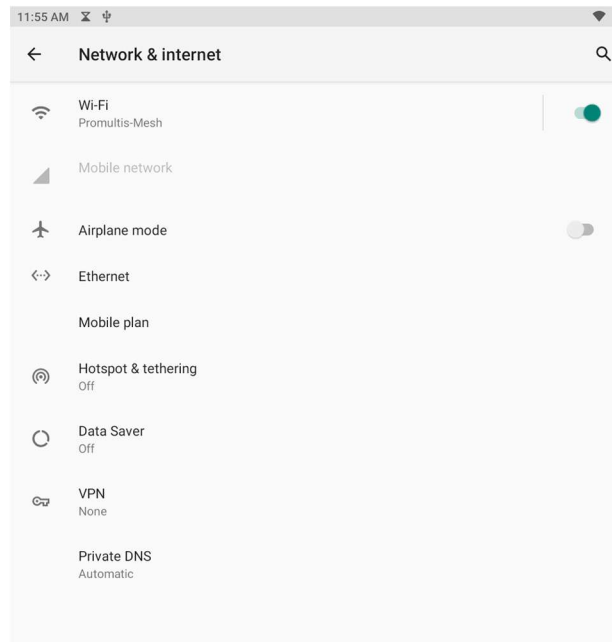

Wi-Fi — Enables or disables wireless network connectivity and allows you to connect to available Wi-Fi networks.

Airplane Mode — Turns off all wireless communication, including Wi-Fi and Bluetooth, for use during flights or when radio signals must be disabled.

Ethernet — Allows the device to connect to a wired network when an Ethernet cable is plugged in.

Hotspot & Tethering — Lets you share the device's internet connection with other devices via Wi-Fi, USB, or Bluetooth.


Data Saver — Reduces background data usage by limiting how apps access the internet when running in the background.

VPN — Allows connection to a Virtual Private Network for secure, encrypted access to remote networks or online services.

Private DNS — Lets you specify a custom DNS provider to improve security, privacy, or filtering of internet traffic.

Settings - Connections


Tapping on 'Connected devices' will display a screen that looks like this.

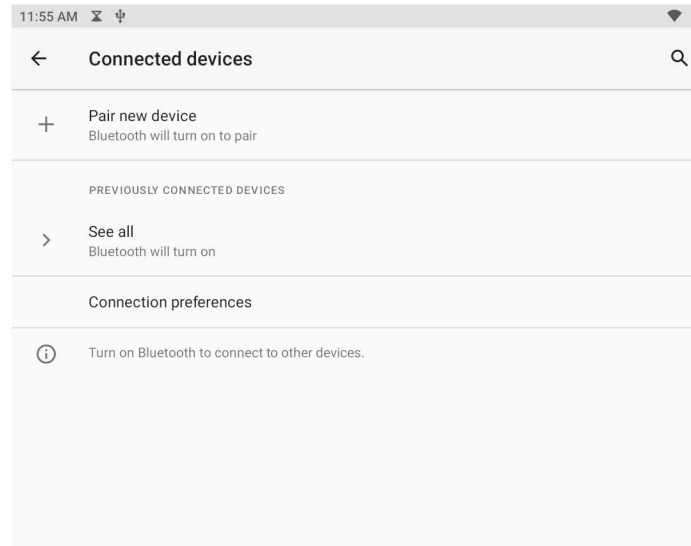

The 'Connected devices' section allows you to manage all devices, pair a new device to the kiosk, view previously connected devices and the connection preferences.

Settings – Apps & Notifications

 Tapping 'Apps & notifications' will display a screen that looks like this.

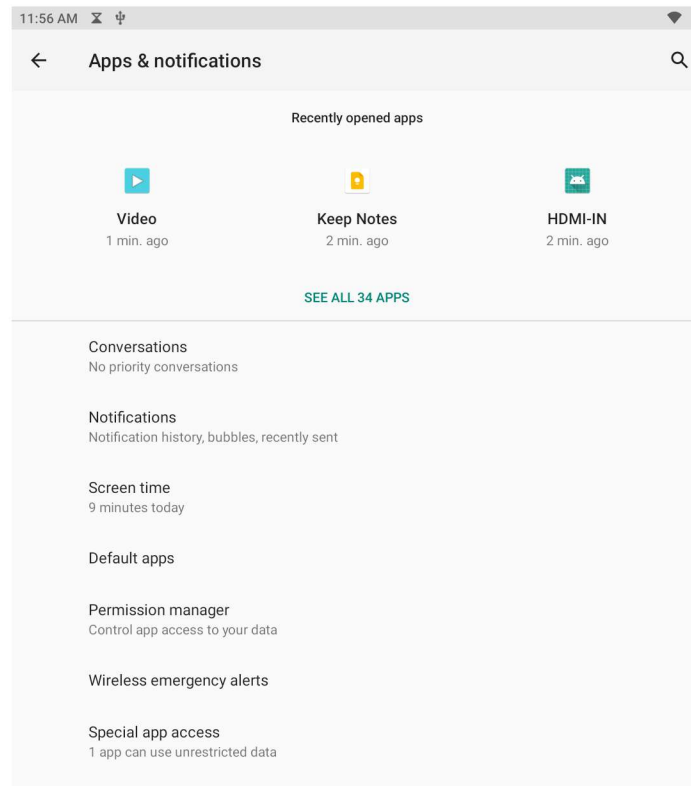

The apps and notifications section, shows the recently opened apps with an option to view all apps, view conversations, notifications, screentime, default apps, permission manager, wireless emergency alerts, special app access.

Conversations — Displays active or recent message threads from supported apps, allowing you to manage conversation related notifications.

Notifications — Controls how apps send alerts, including sound, banners, and lock-screen behaviour.

Screen Time — Provides an overview of how long the device has been used, including time spent in individual apps.

Default Apps — Allows you to choose which apps handle core functions such as browsing, email, calling, and media playback.

 
Permission Manager — Shows which apps have access to features like the camera, microphone, location, storage, and more, allowing permissions to be adjusted.

Wireless Emergency Alerts — Manages government or emergency broadcast alerts sent over mobile networks.

Special App Access — Lists advanced permissions and system-level access options (such as picture-in-picture, unrestricted data, or modifying system settings) for apps that require them.

Settings – Display


Tapping 'Display' will display a screen that looks like this.

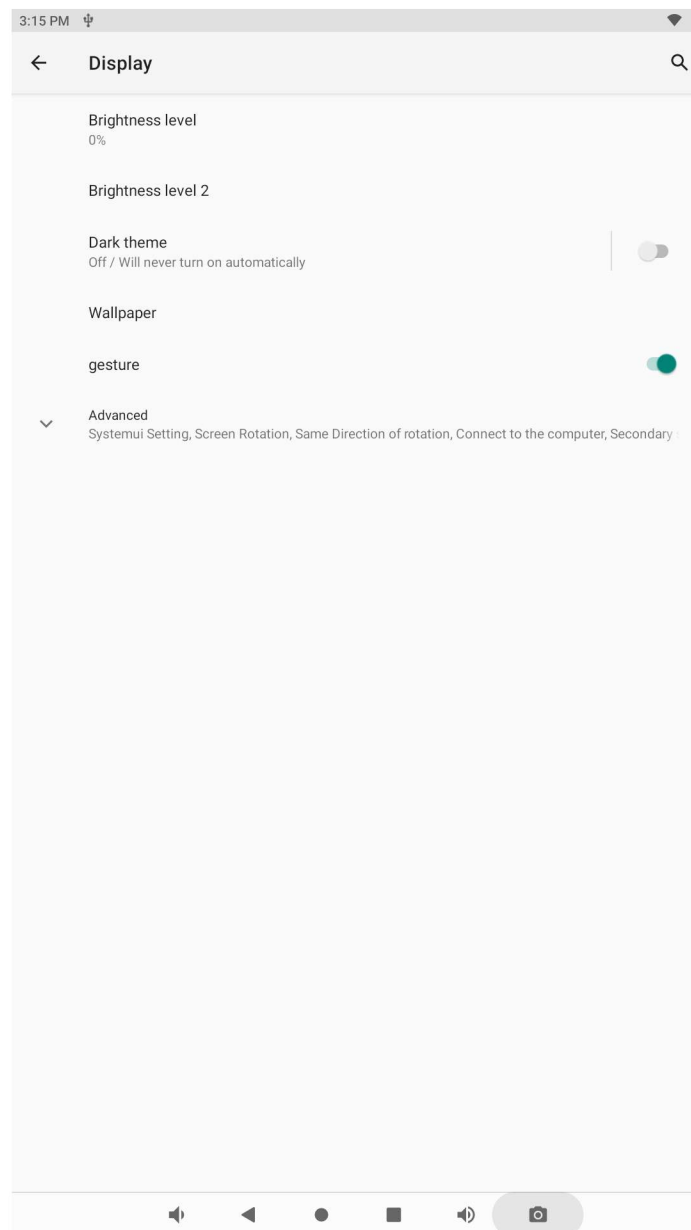

The Display section allows you to adjust key visual settings, including Brightness Level, Brightness Level 2, Dark Theme, Wallpaper, Gesture controls, and additional options found under Advanced settings.

Settings – Sound

 
Tapping 'Sound' will display a screen that looks like this.

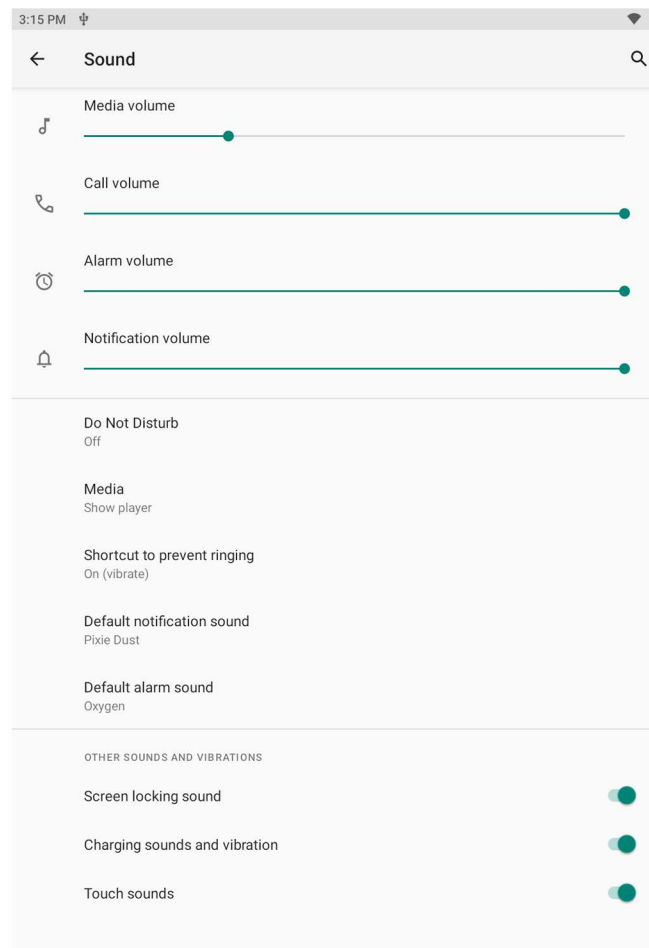

The Sound section allows you to adjust key sound settings, including media volume, call volume, alarm volume, notification volume, do not disturb, media, shortcut to prevent ringing, default notification sound, default alarm sound, screen locking sound, charging sounds and vibration and touch sounds.

Settings - Storage

 
Tapping 'Storage' will display a screen that looks like this.

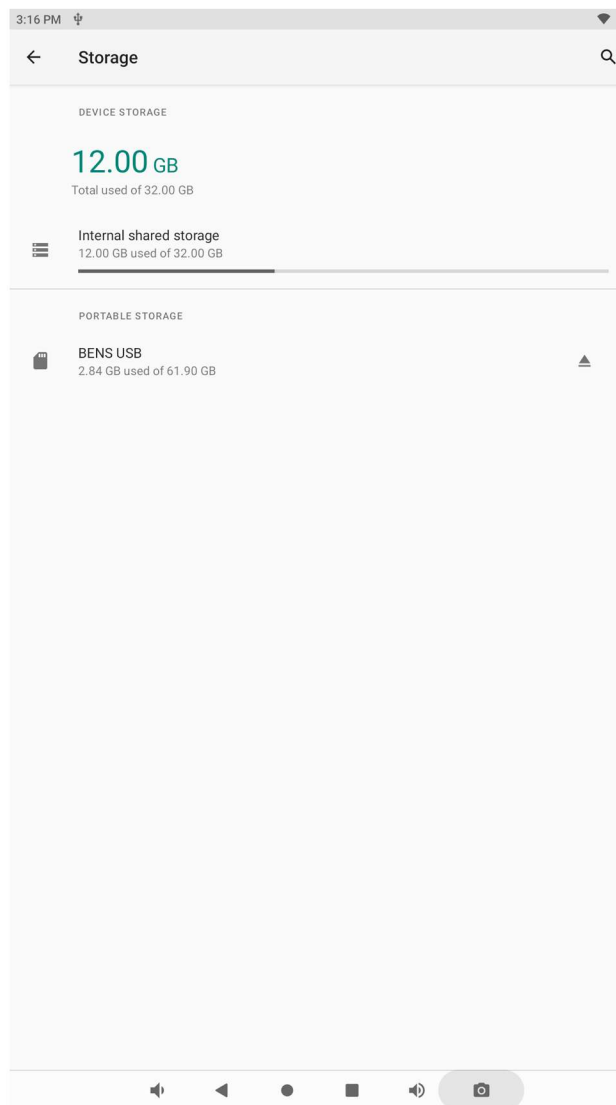

The Storage section allows you to view and manage the device's internal storage, as well as access and monitor any connected external storage devices.

Settings - Location


Tapping 'location' will display a screen that looks like this.

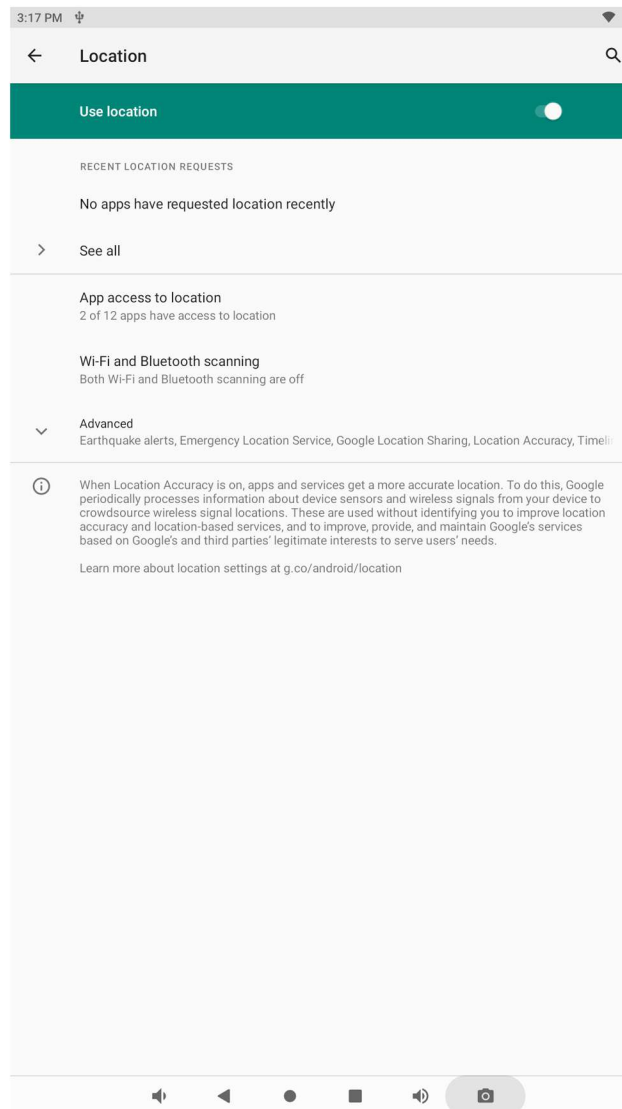

The Location section allows you to turn location services on or off, view recent location requests, manage which apps can access your location, enable Wi-Fi and Bluetooth scanning, and adjust additional advanced location settings.

Settings - Accounts



Tapping 'location' will display a screen that looks like this.

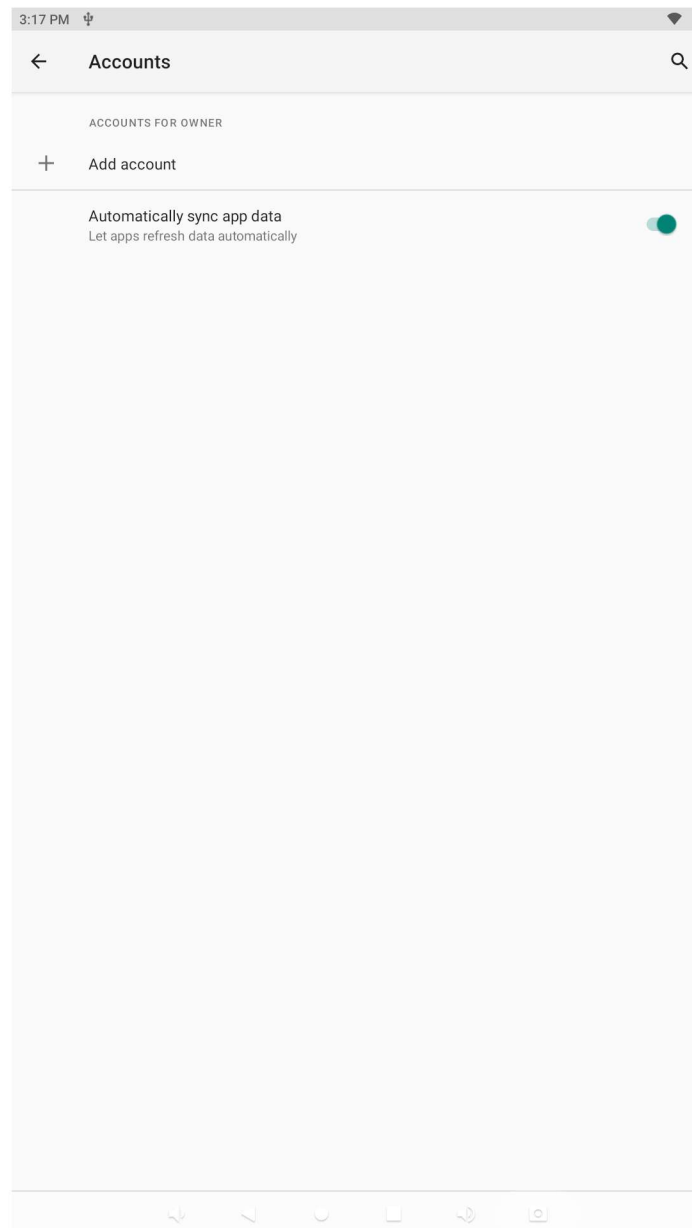

The Accounts section allows you to add and manage user accounts on the device. This includes signing in with services such as Google, email providers, cloud storage platforms, and other apps that require account authentication.

Settings - Accessibility


Tapping 'Accessibility' will display a screen that looks like this

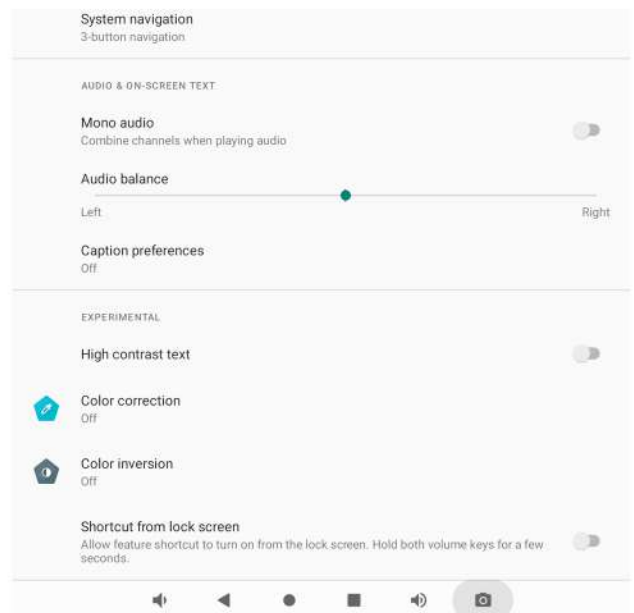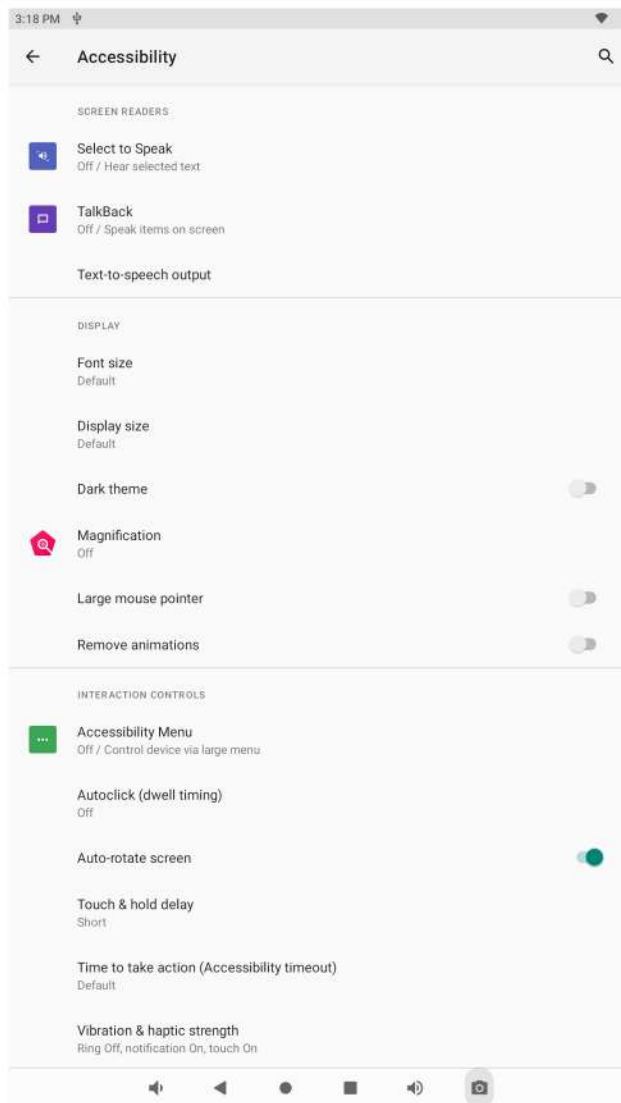

The Accessibility section provides a range of tools designed to make the device easier to see, hear, and interact with. These include features such as Select to Speak and TalkBack for spoken feedback, Text-to-Speech Output for controlling reading voice settings, and options to adjust Font Size, Display Size, Dark Theme, and Magnification for improved visibility. Additional controls such as Large Mouse Pointer, Remove Animations, and the Accessibility Menu offer simplified interaction, while Auto-Click, Auto-Rotate Screen, Touch & Hold Delay, and Time to Take Action help tailor how the device responds to touch and on-screen prompts. The section also includes Vibration & Haptic Strength, System Navigation, Mono Audio, and Audio Balance for users with hearing or interaction needs, along with Caption Preferences, High Contrast Text, Color Correction, and Color Inversion for enhanced readability and colour accessibility. An Accessibility Shortcut can also be enabled from the lock screen for quick access to selected features.

Settings – System


Tapping 'System' will display a screen that looks like this.

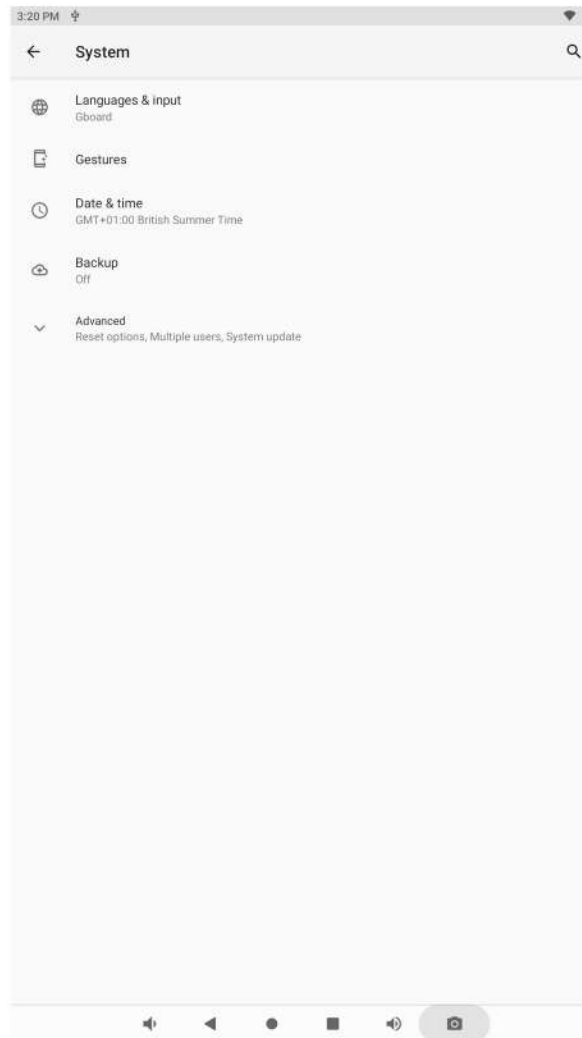

The System section provides access to core device settings, including Languages & Input for managing keyboard and language preferences, Gestures for navigation shortcuts, Date & Time for adjusting regional time settings, and Backup for saving device data. It also includes Advanced options such as Reset Options for restoring the device, Multiple Users for managing separate user profiles, and System Update for checking and installing the latest software updates.

Settings - About

 Tapping 'About' will display a screen that looks like this.

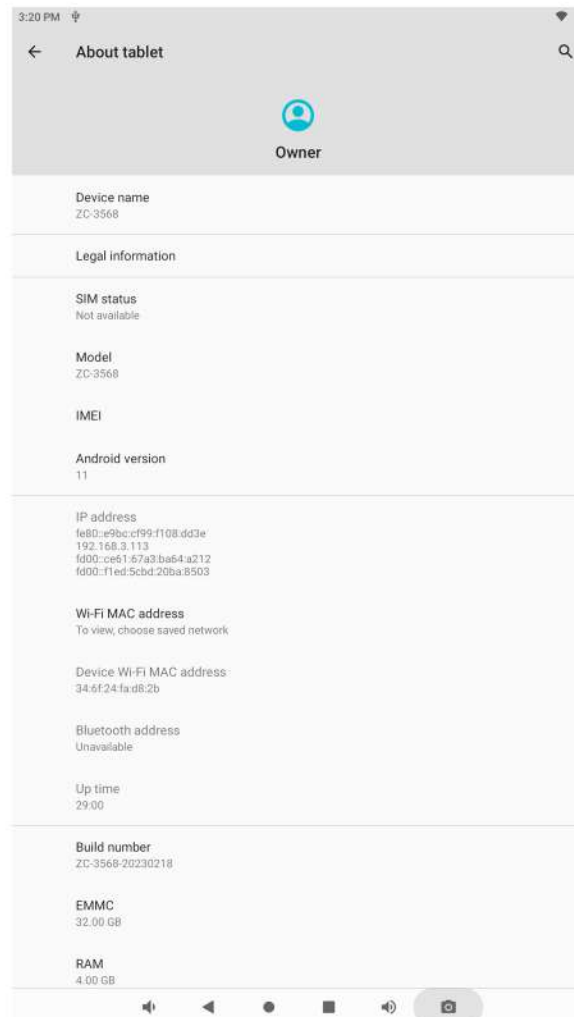

The About section provides detailed information about the device, including the model name, Android version, network details, IP and MAC addresses, storage capacity, RAM, build number, and system uptime. This area is used to identify the device, check software versions, and view essential hardware and system information.

Troubleshooting

Please Note

- Excessive use of speakers at maximum volume will blow the speakers.
- This will not be covered under warranty.



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794

