

Promultis Vista

The Promultis Vista is a Outdoor, IP66, up to 4000 Nits High Brightness Touchscreen With 10 PCAP Touch Points and a Solid-State, Fanless Design.



Note: Product design specifications including dimensions are subject to change without notice & may vary from those shown. Please call us for the most up to date specifications and dimensions.



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794



Getting Started

Included in your product box:



Power Cable



Remote



Manual



[promultis]

For more exciting multitouch products visit

www.promultis.info

or call +44 (0) 239 251 2794

 


Remote for the Vista




Home Screen

After the screen boots up, you will enter the Android home screen, pictured below.

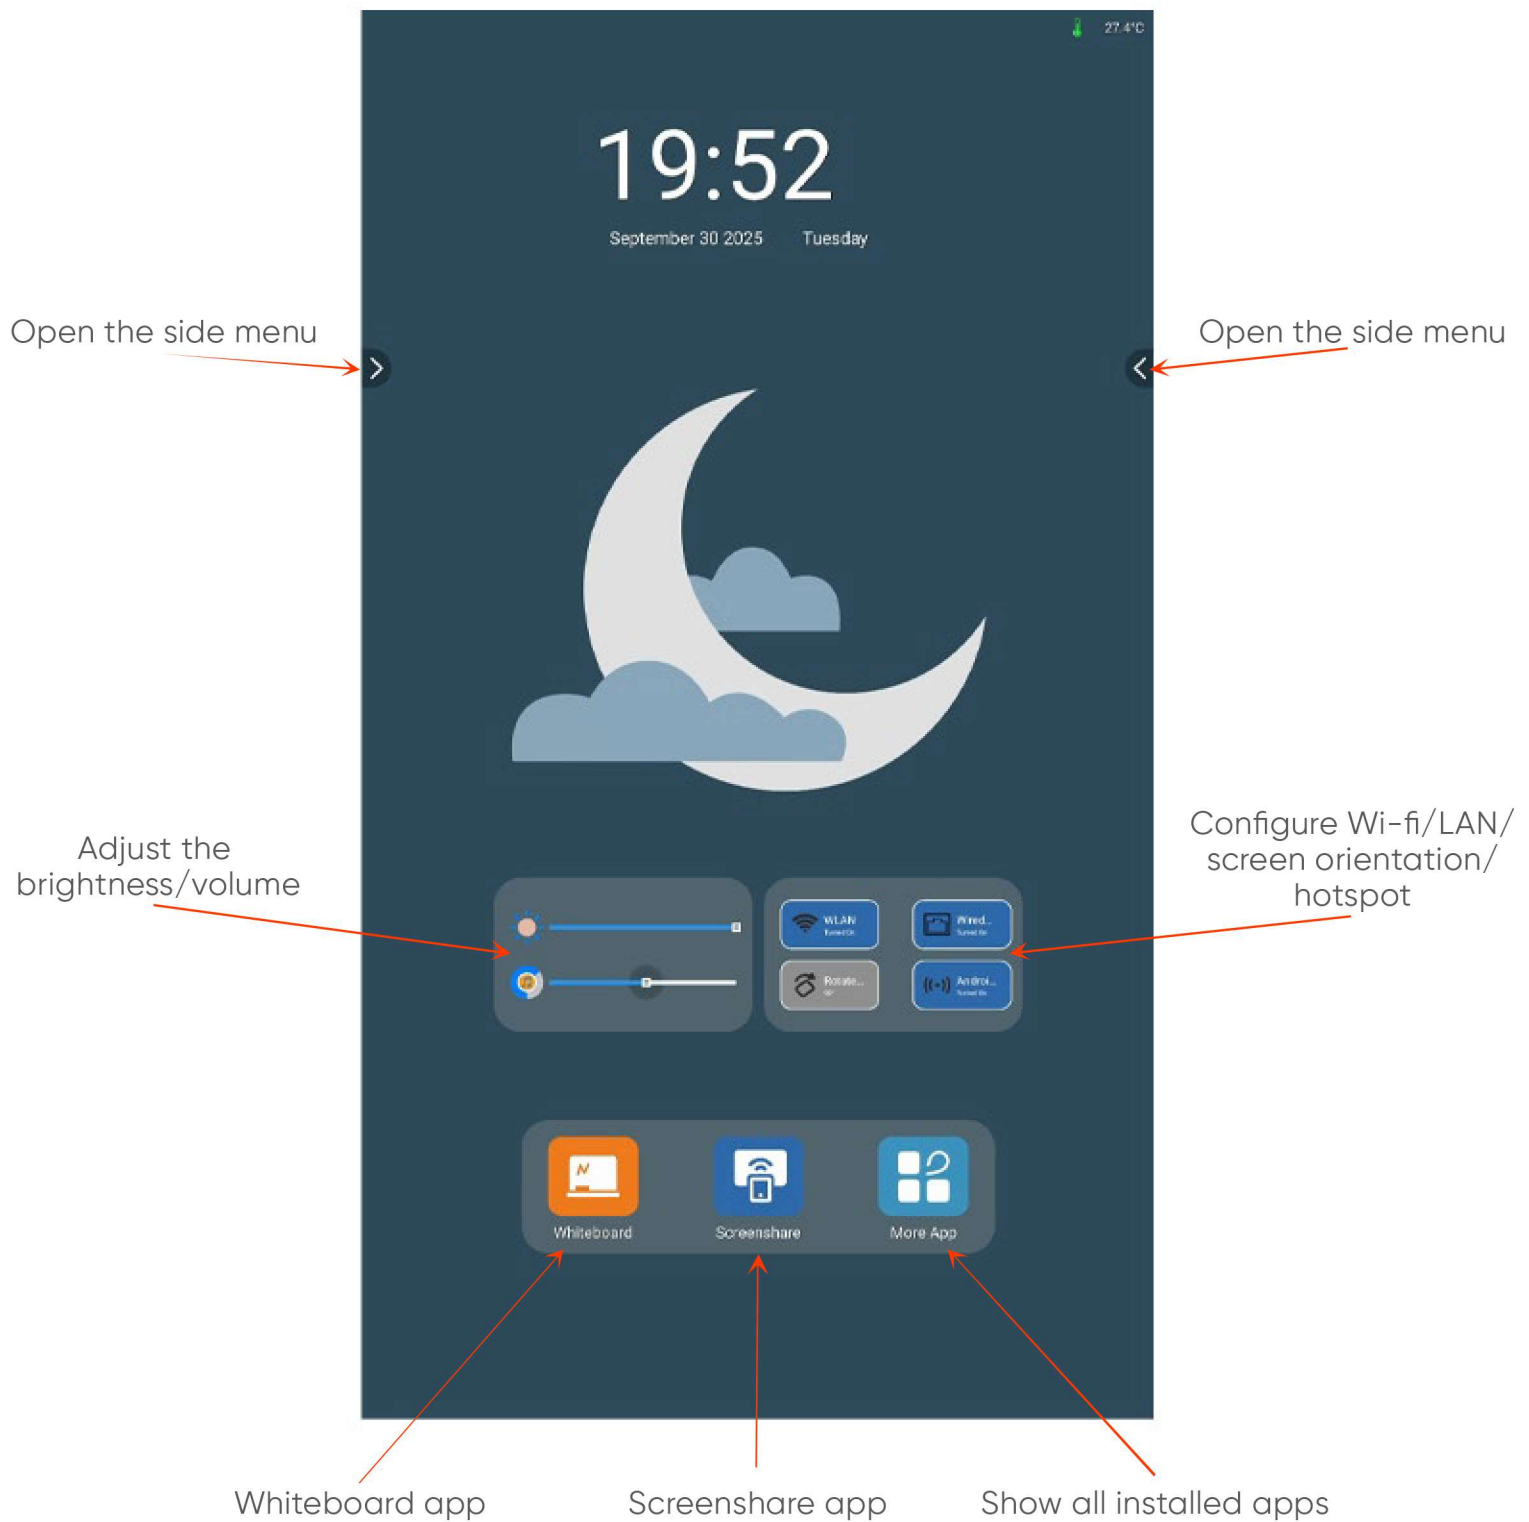

All apps

 
After tapping "More app" you will be taken to this screen, pictured below.

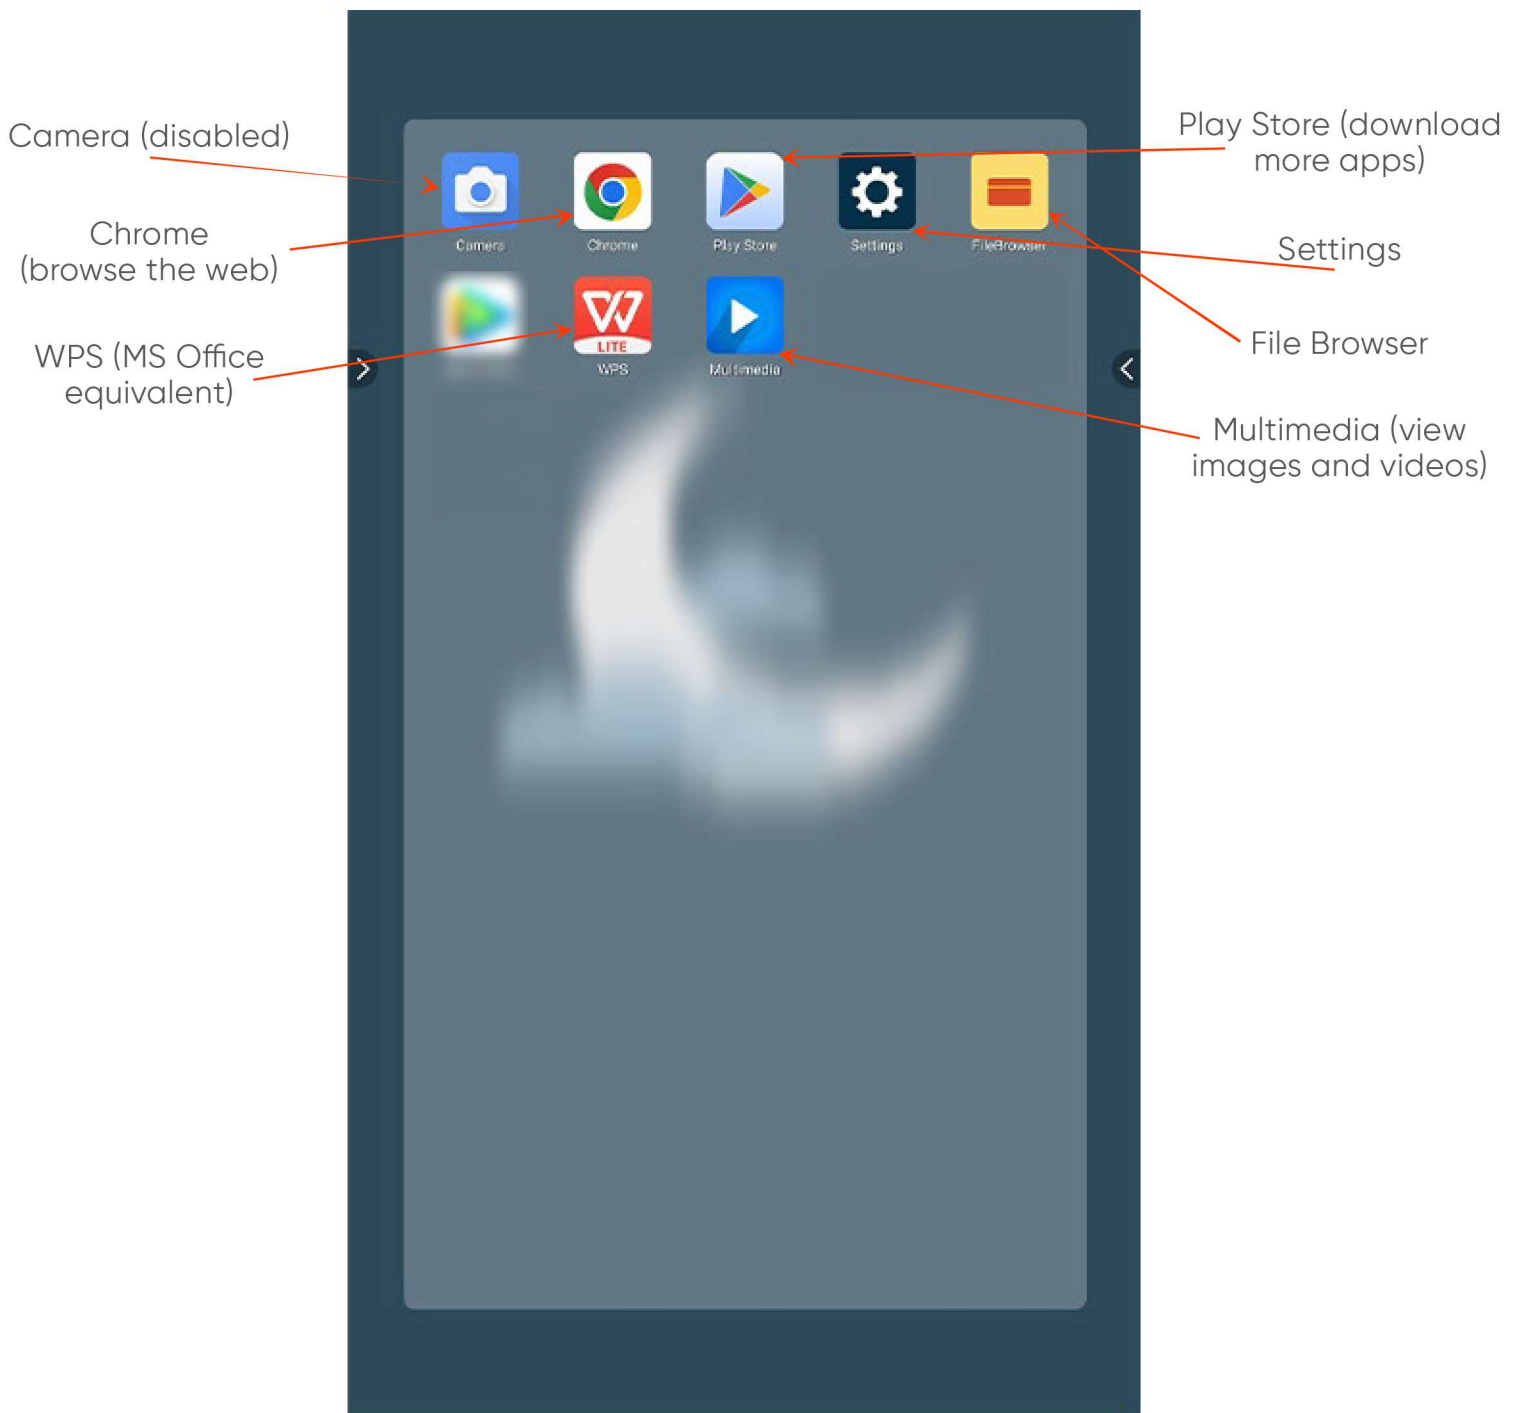

Settings - Network

Tapping "Settings" will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 
Select 'Wired' to configure a wired connection to the screen. NOTE: The wired internet cable must be plugged in to the port on the right on the back of the screen.

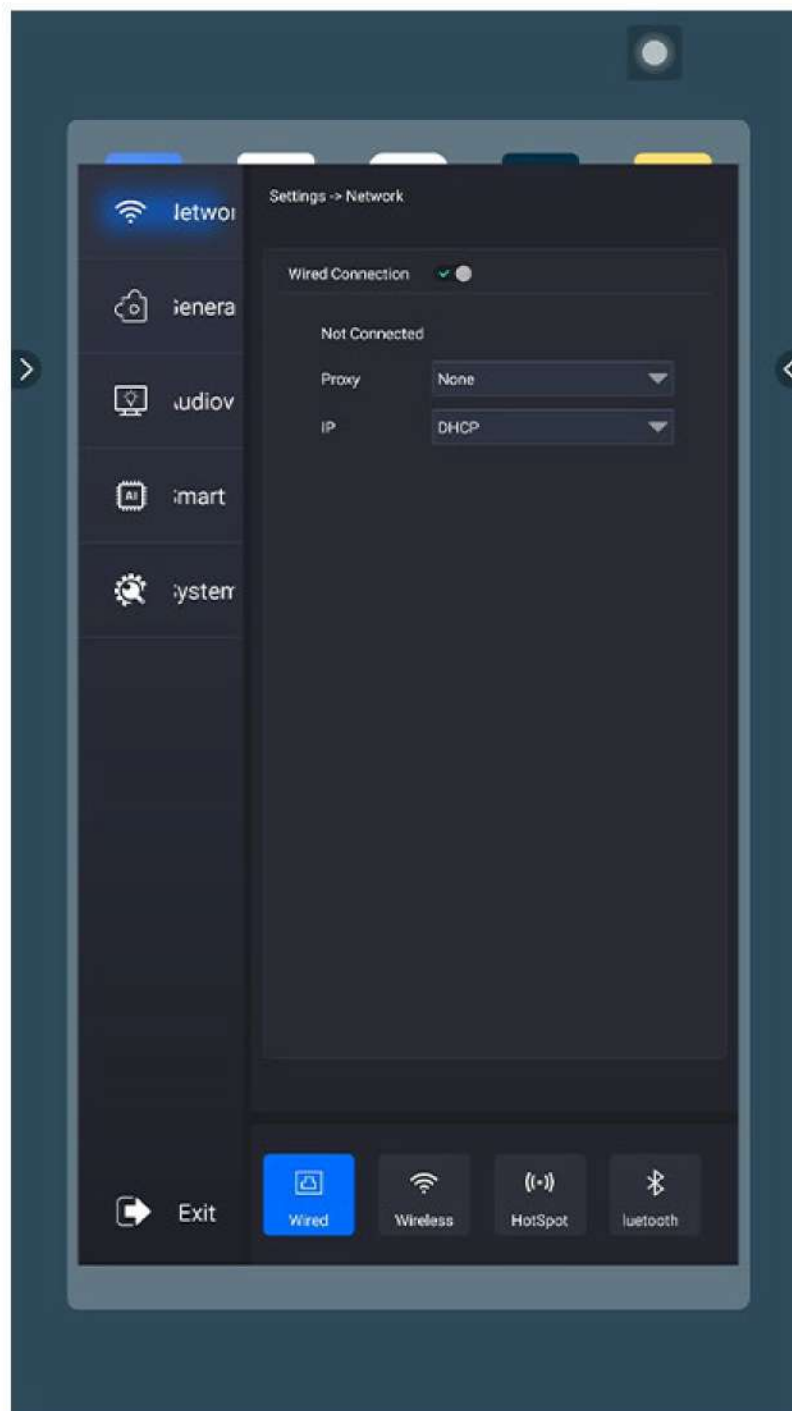

Settings - Network

Tapping "Settings" will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 
Select 'Wireless' to configure a wireless connection to the screen. NOTE: The antennas must be plugged in to the back of the screen.

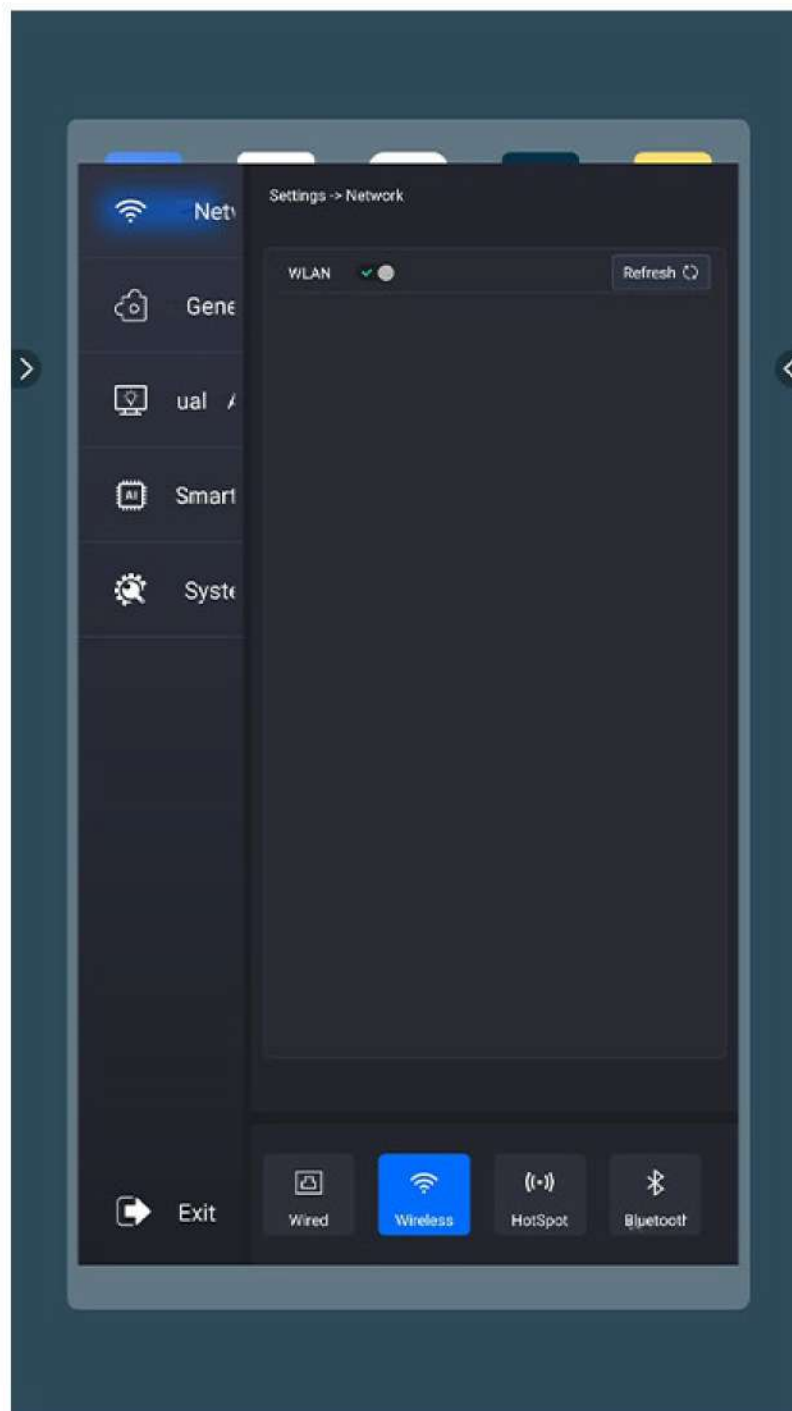

Settings - Network

Tapping "Settings" will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 
Select 'Hotspot' to configure a hotspot connection.

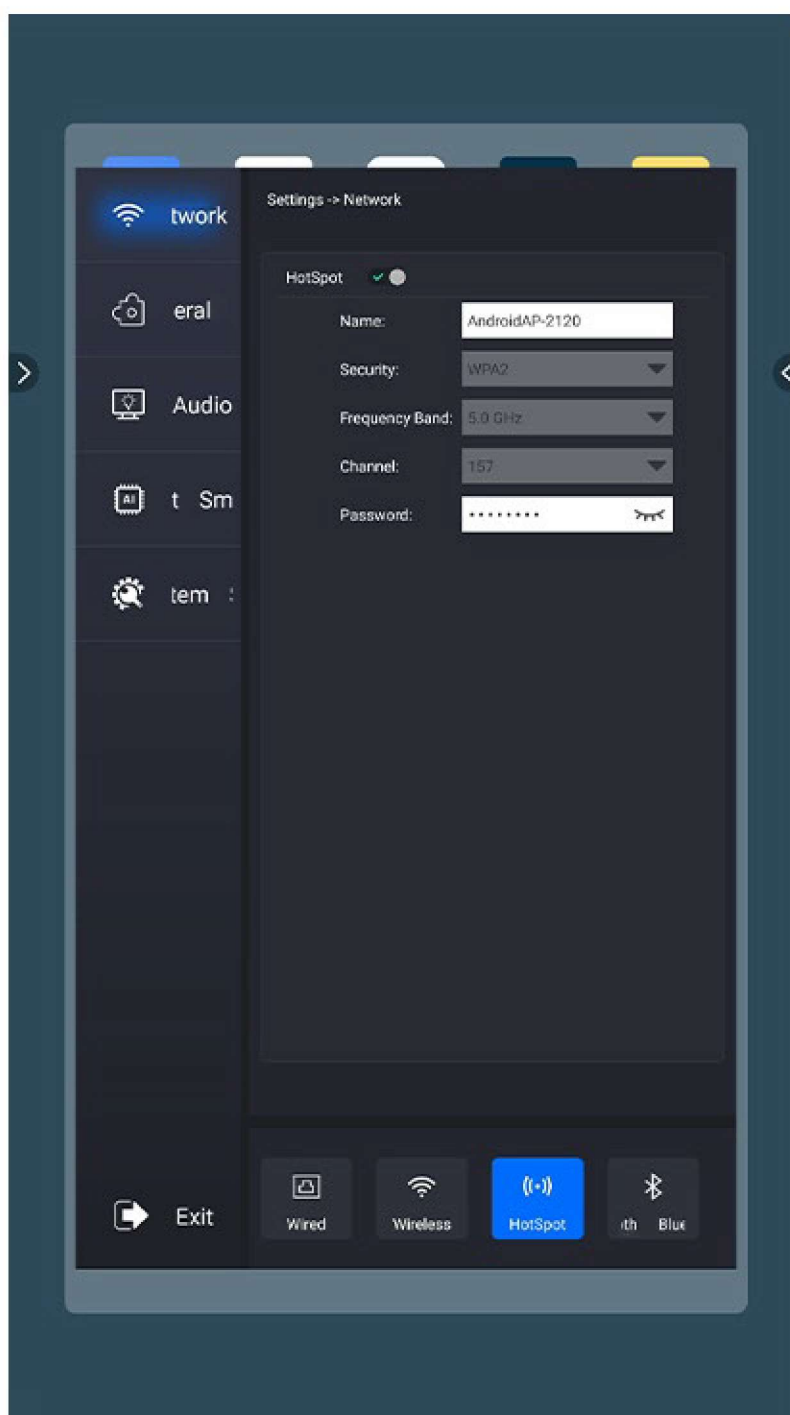

Settings - Network

Tapping "Settings" will take you to this menu. Tap the first row in the column on the left to select the network settings. Along the bottom of the screen, there are different options to choose from in the network section.

 
Select 'Bluetooth' to configure bluetooth settings.

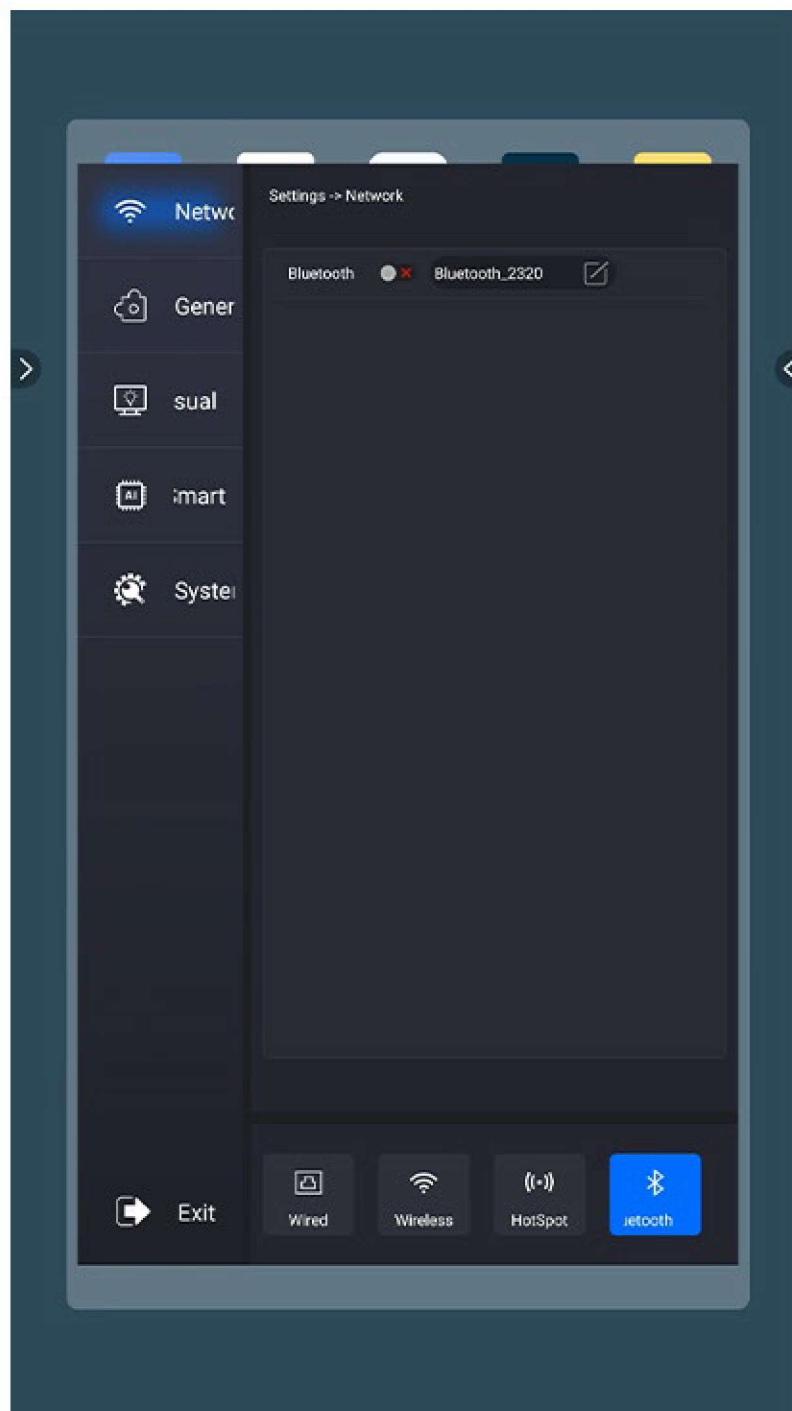

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Theme' to change the theme.

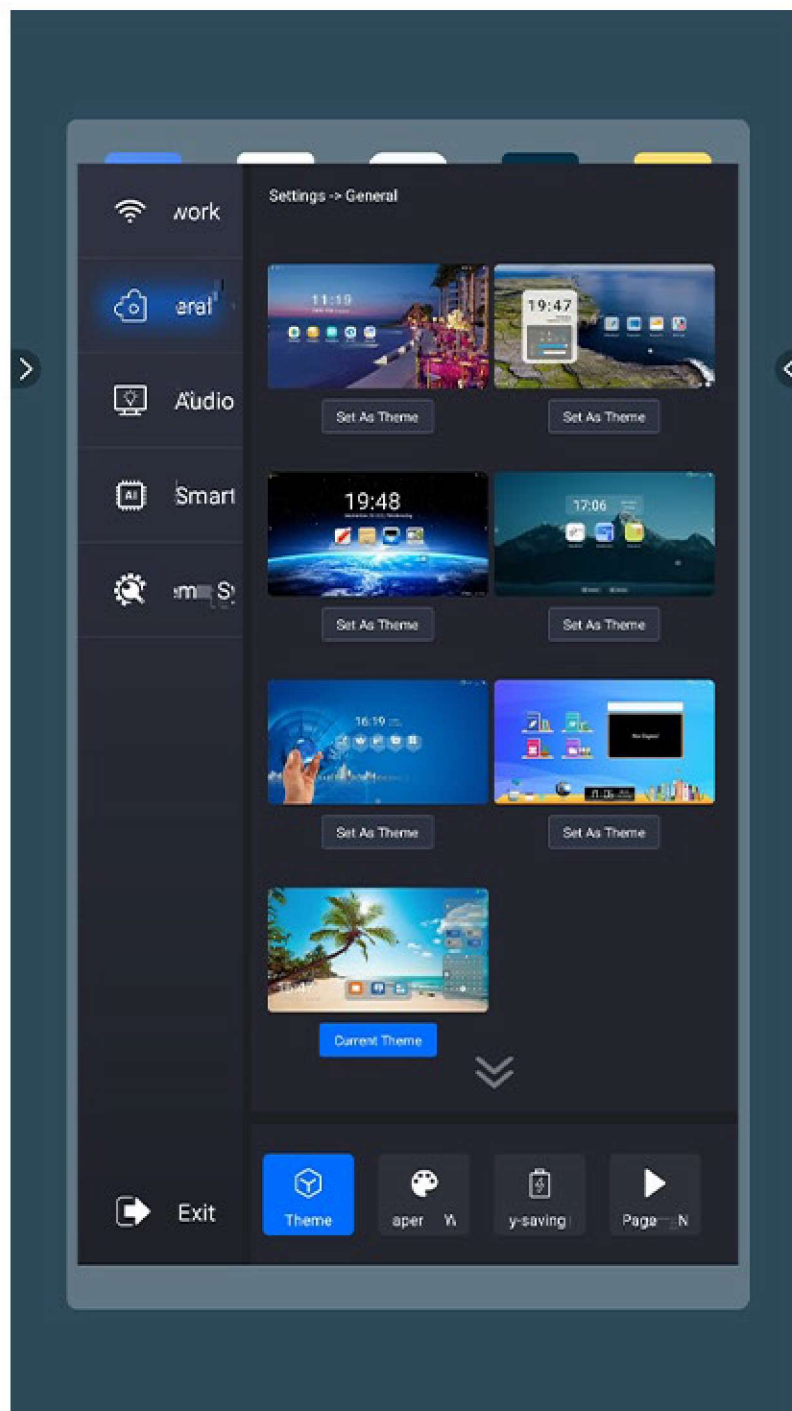

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Wallpaper' to change the wallpaper.

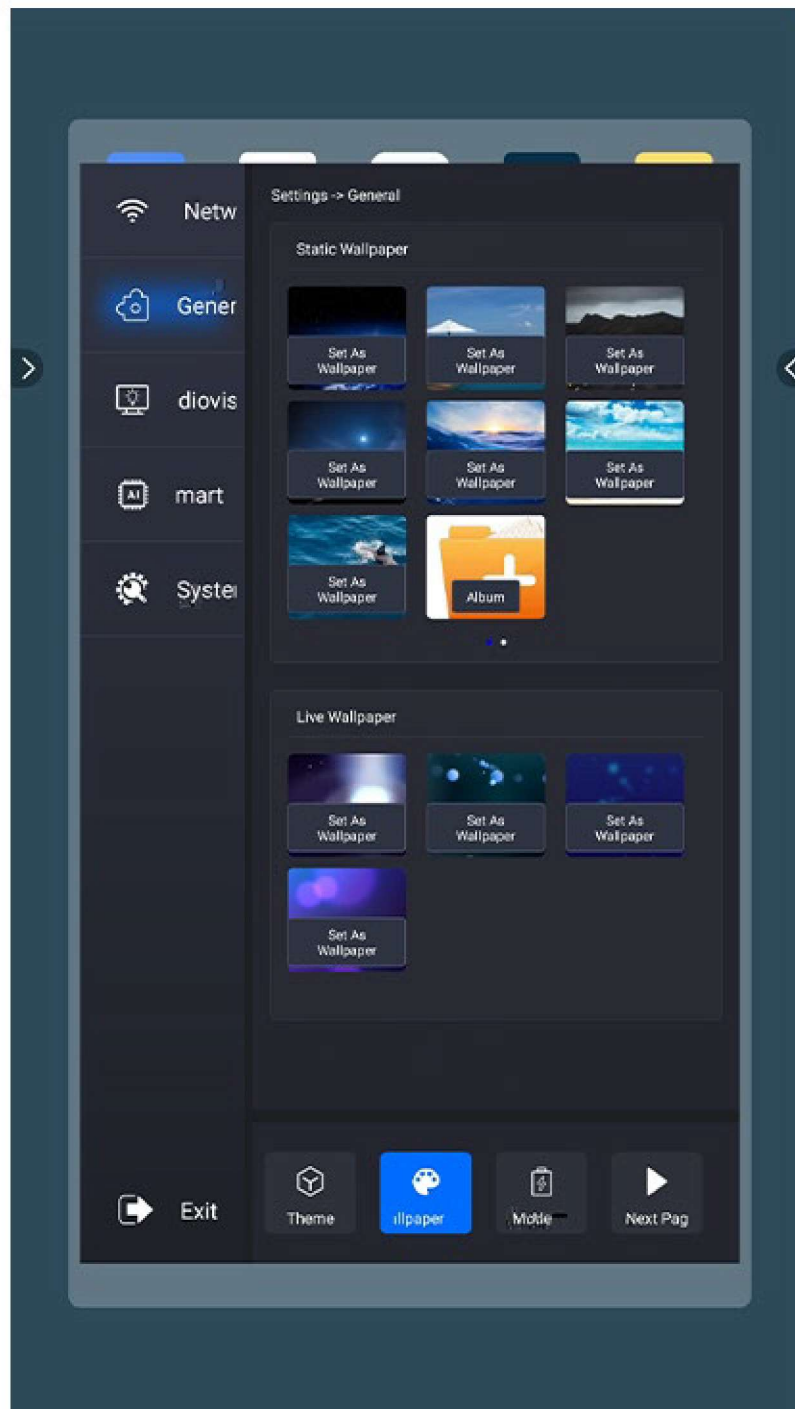

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Energy-saving' to edit the sleep timer and operation.

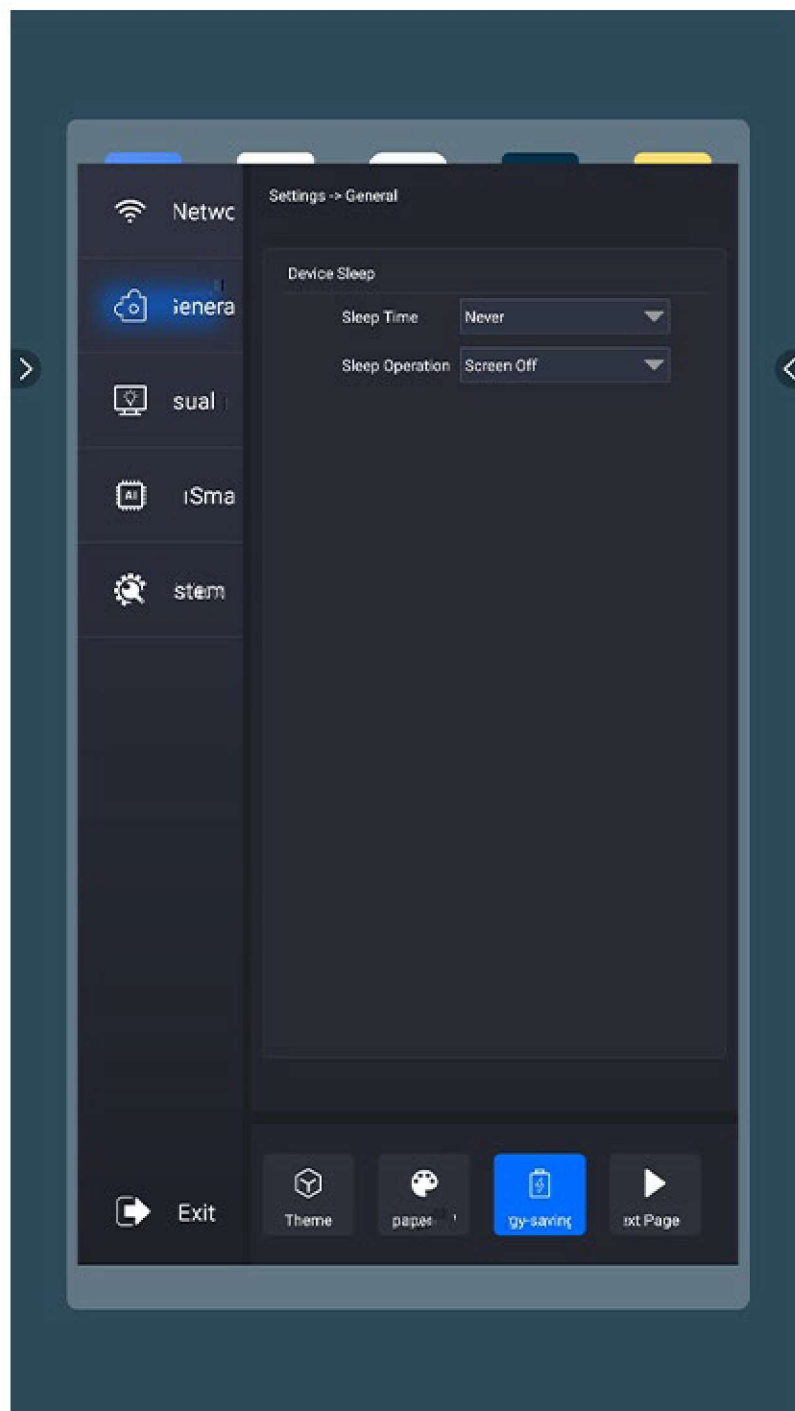

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Regulation' to adjust the brightness and sound.

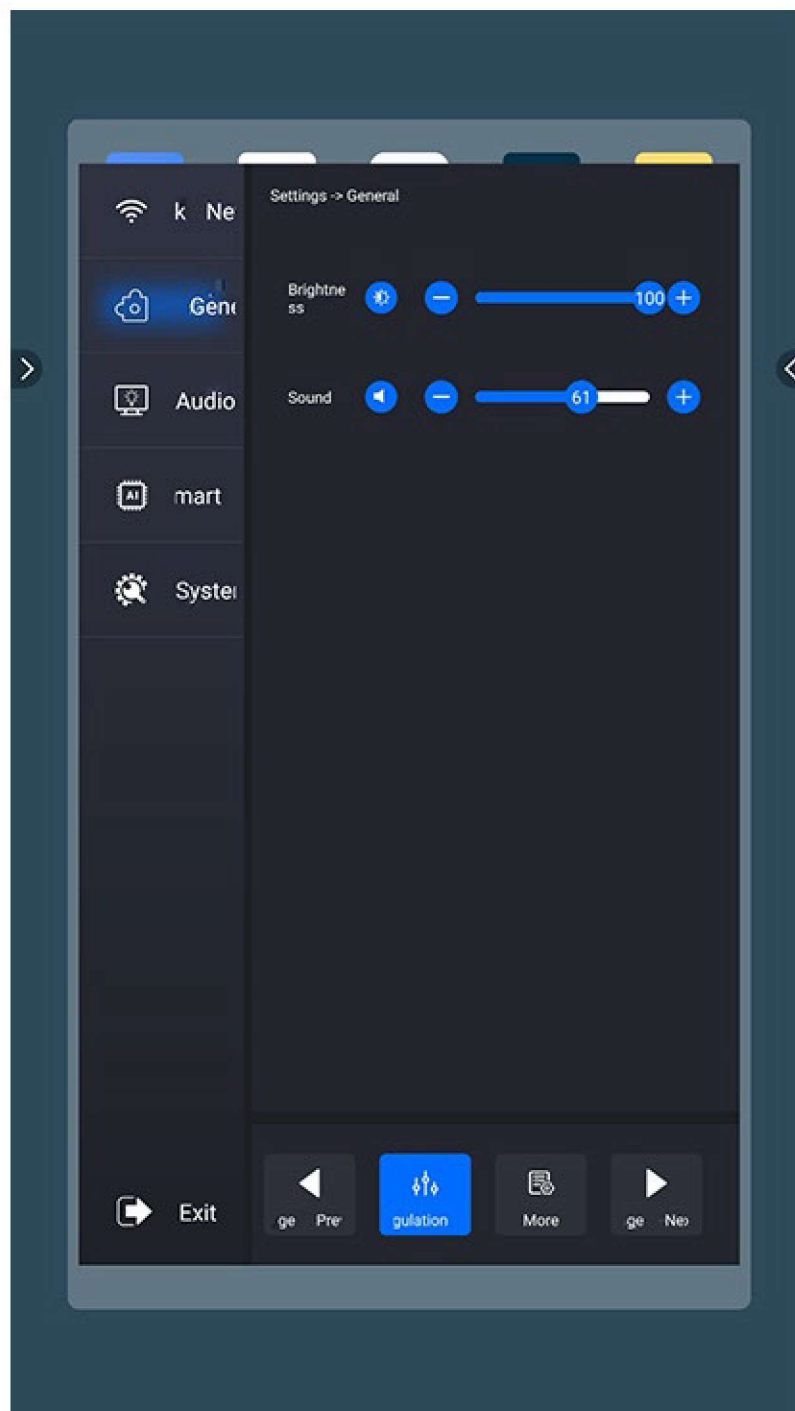

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'More' to toggle the visibility of the sidebar/menus as well as certain functionalities and widgets.

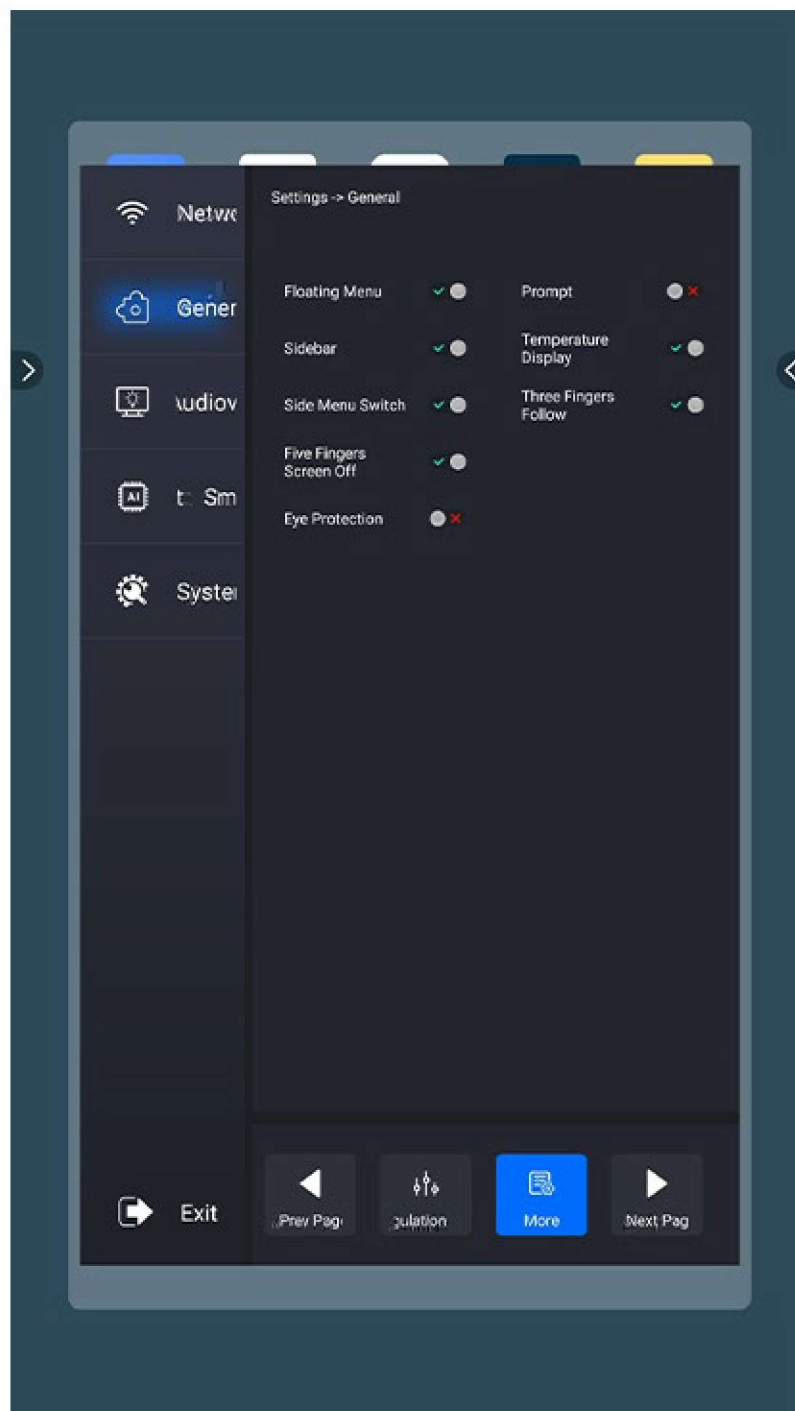

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Boot App' to select an app for the screen to boot into.

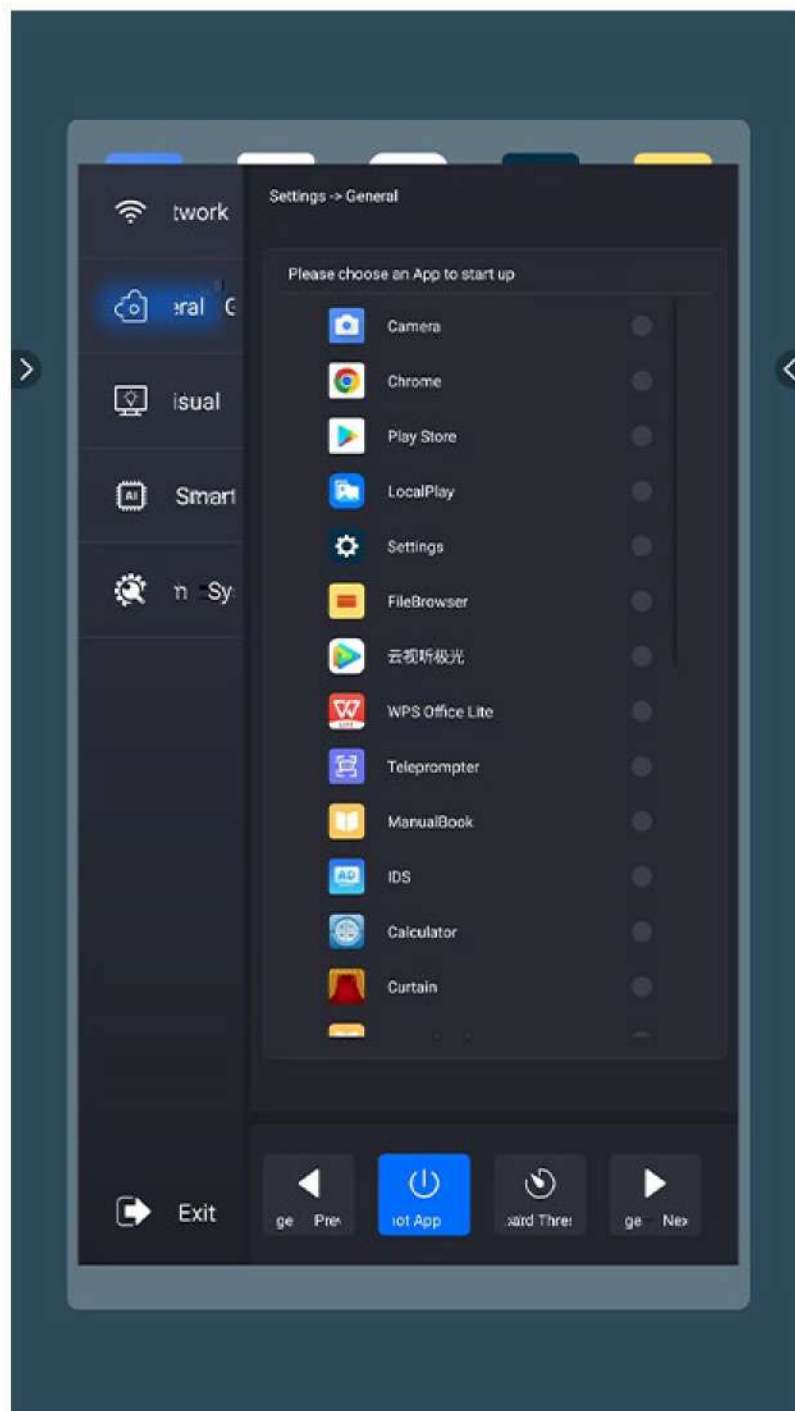

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Whiteboard' to set the threshold for the screen.

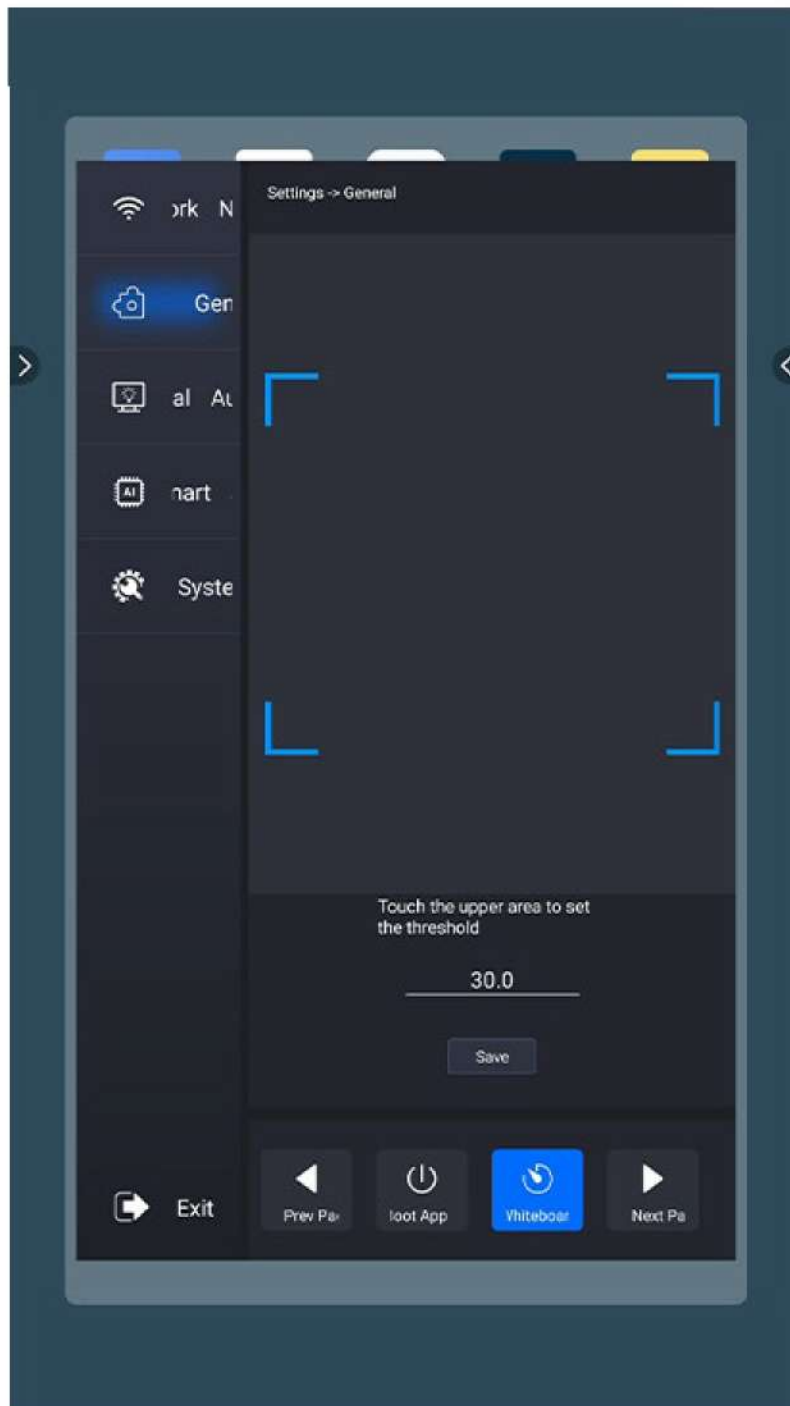

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Application' to clear cache, clear data and uninstall your installed apps.

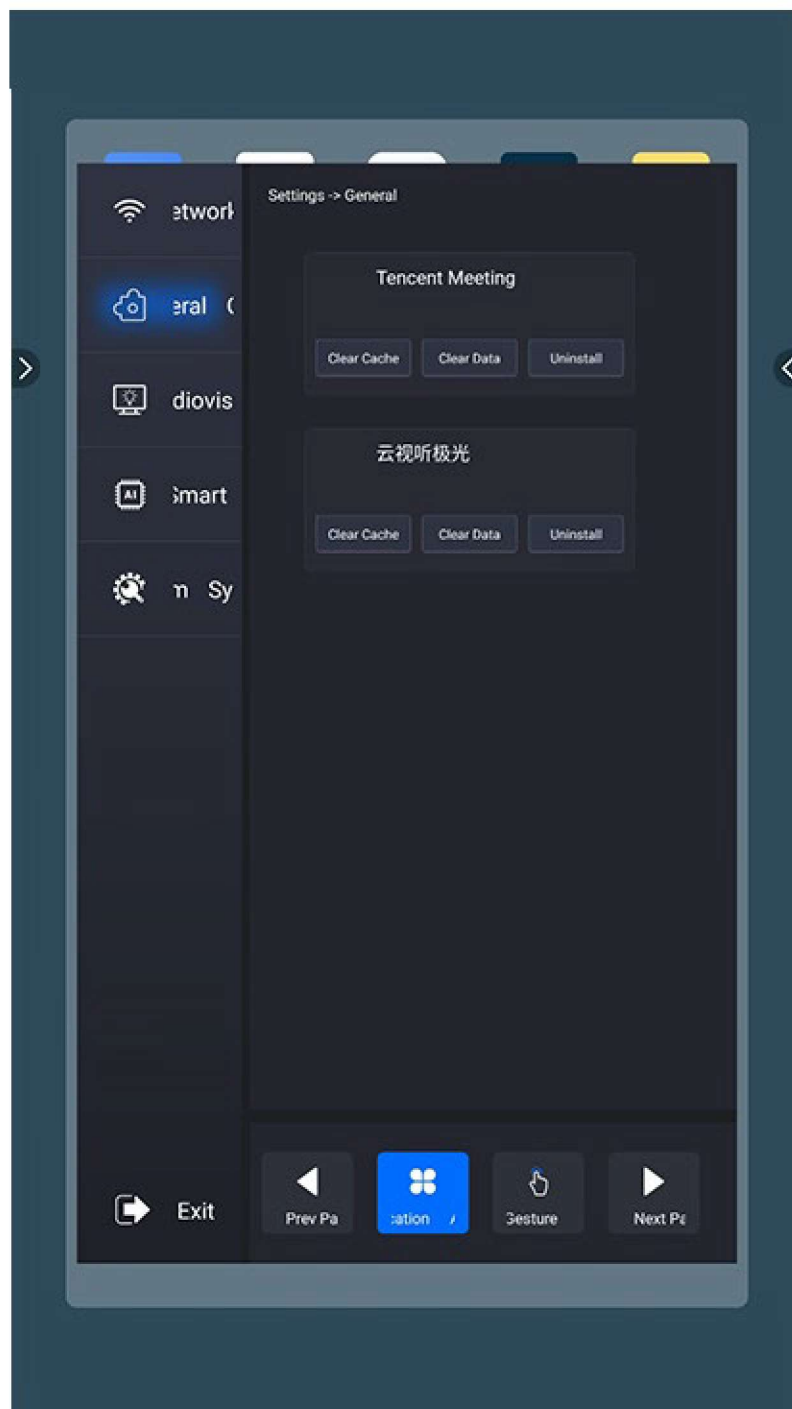

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Five Finger Gesture' to set an action for a five finger gesture.

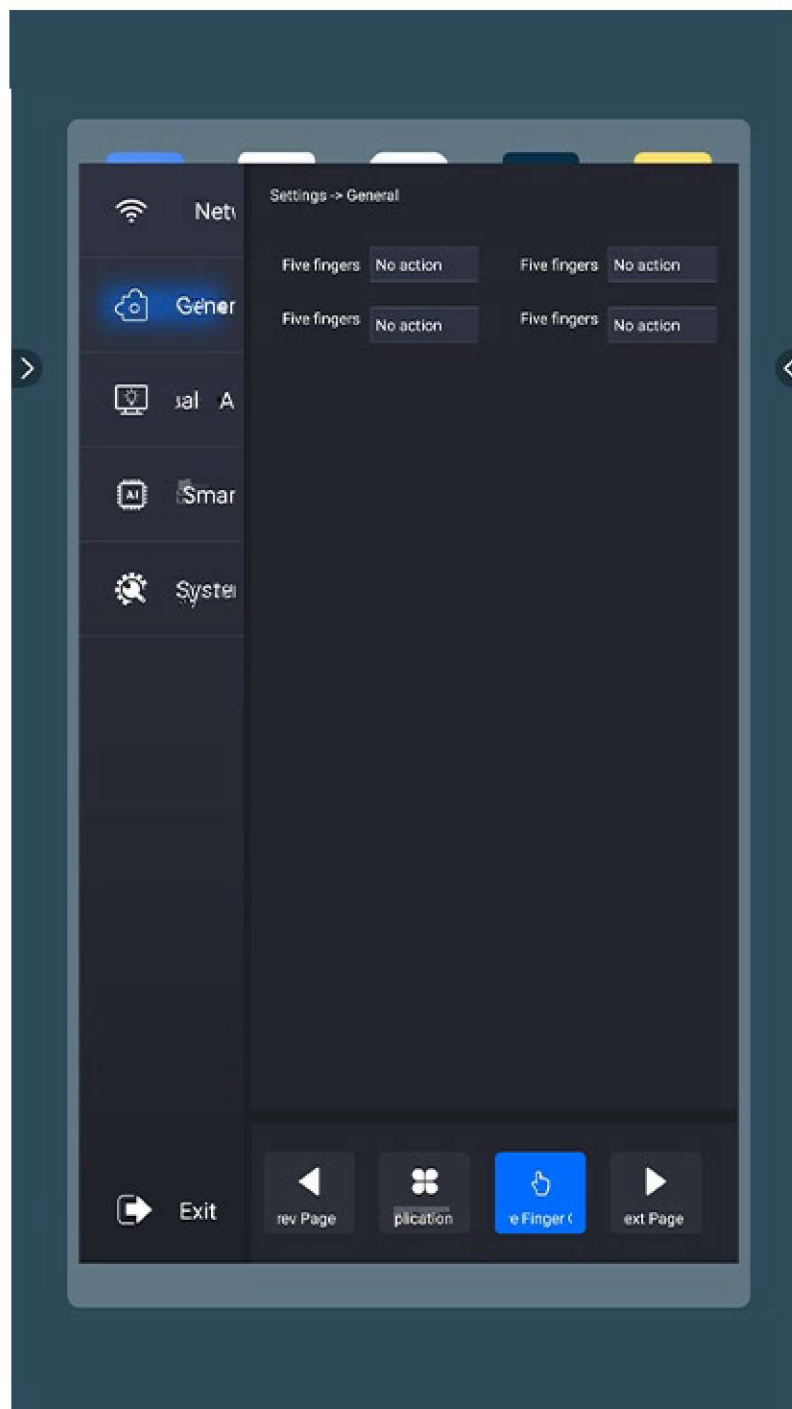

Settings - General

Tapping "Settings" will take you to this menu. Tap the second row in the column on the left to select the general settings. Along the bottom of the screen, there are different options to choose from in the general section.

 
Select 'Blu-ray setting' to adjust the Blu-ray settings.

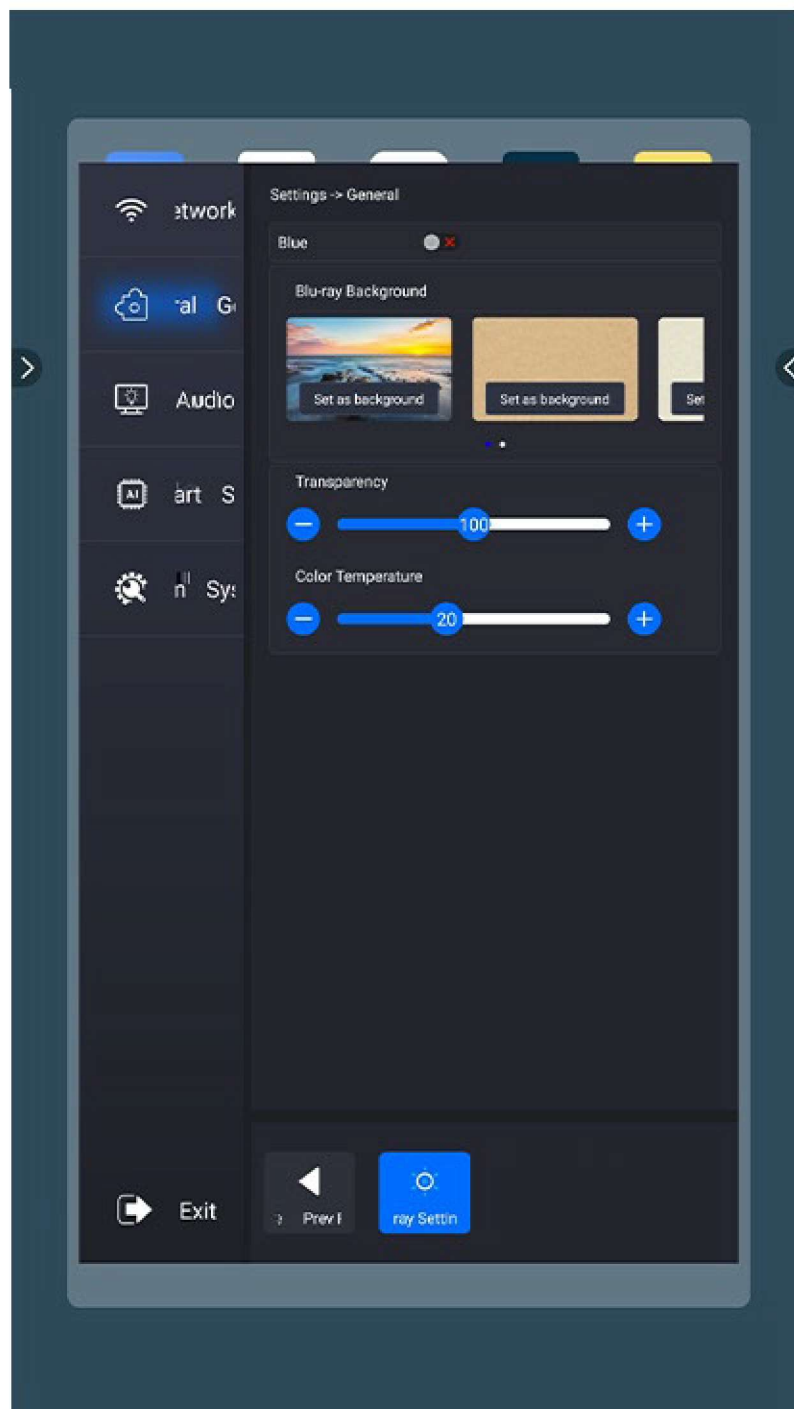

Settings - Audiovisual

Tapping "Settings" will take you to this menu. Tap the third row in the column on the left to select the general settings.

 
Select 'Audiovisual' to adjust the sound settings.

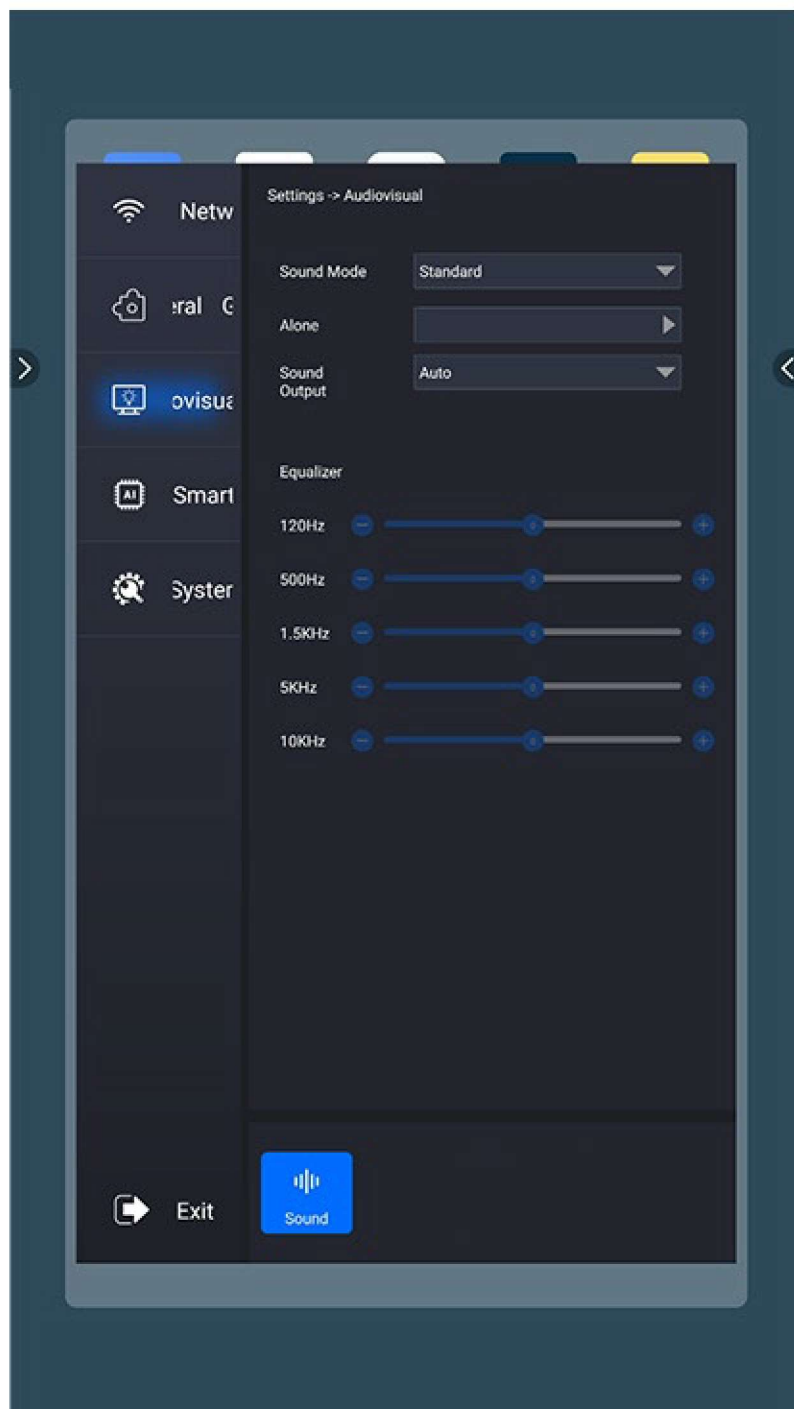

Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

 
Select 'Security' to adjust the security settings.

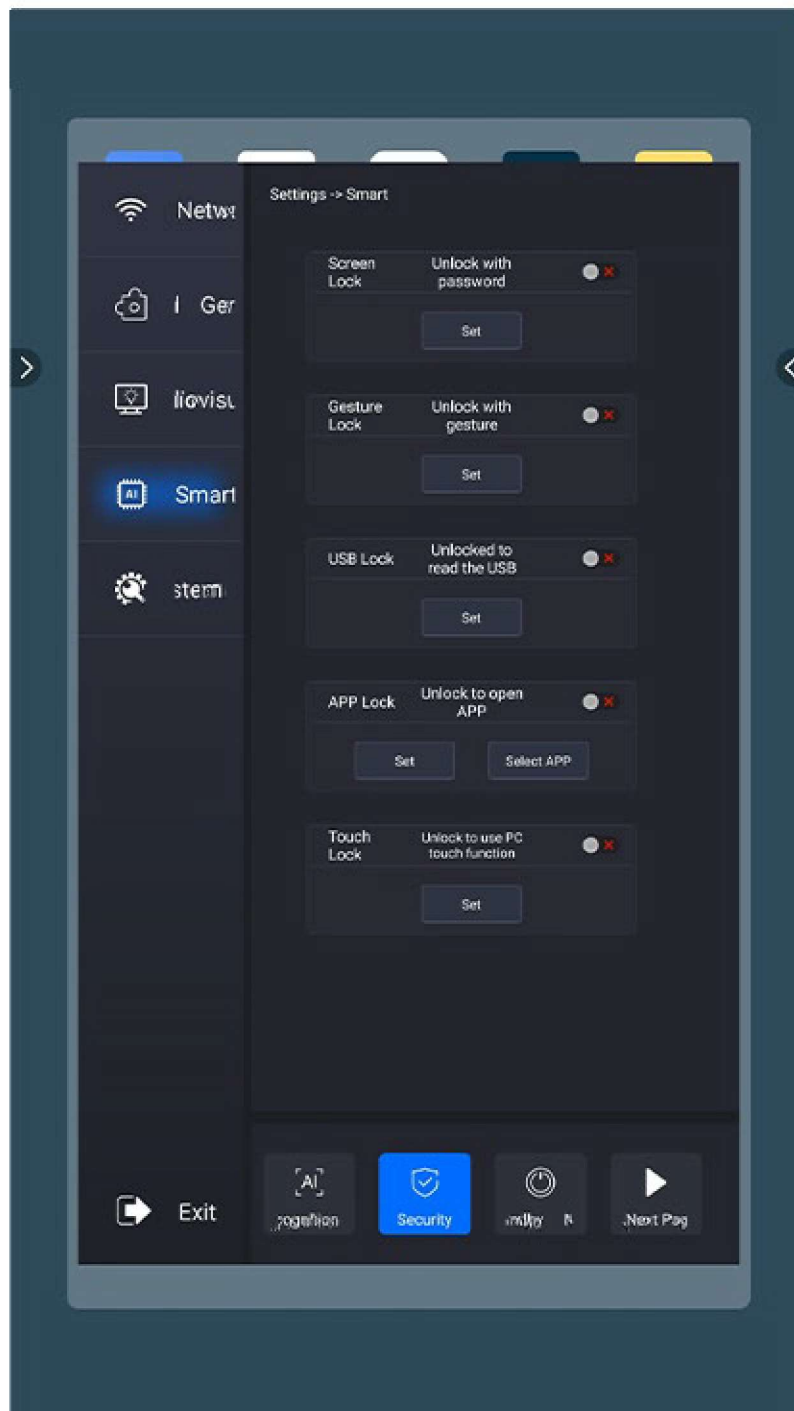

Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

 
Select 'Signal' to adjust the "No Signal" screens' settings.

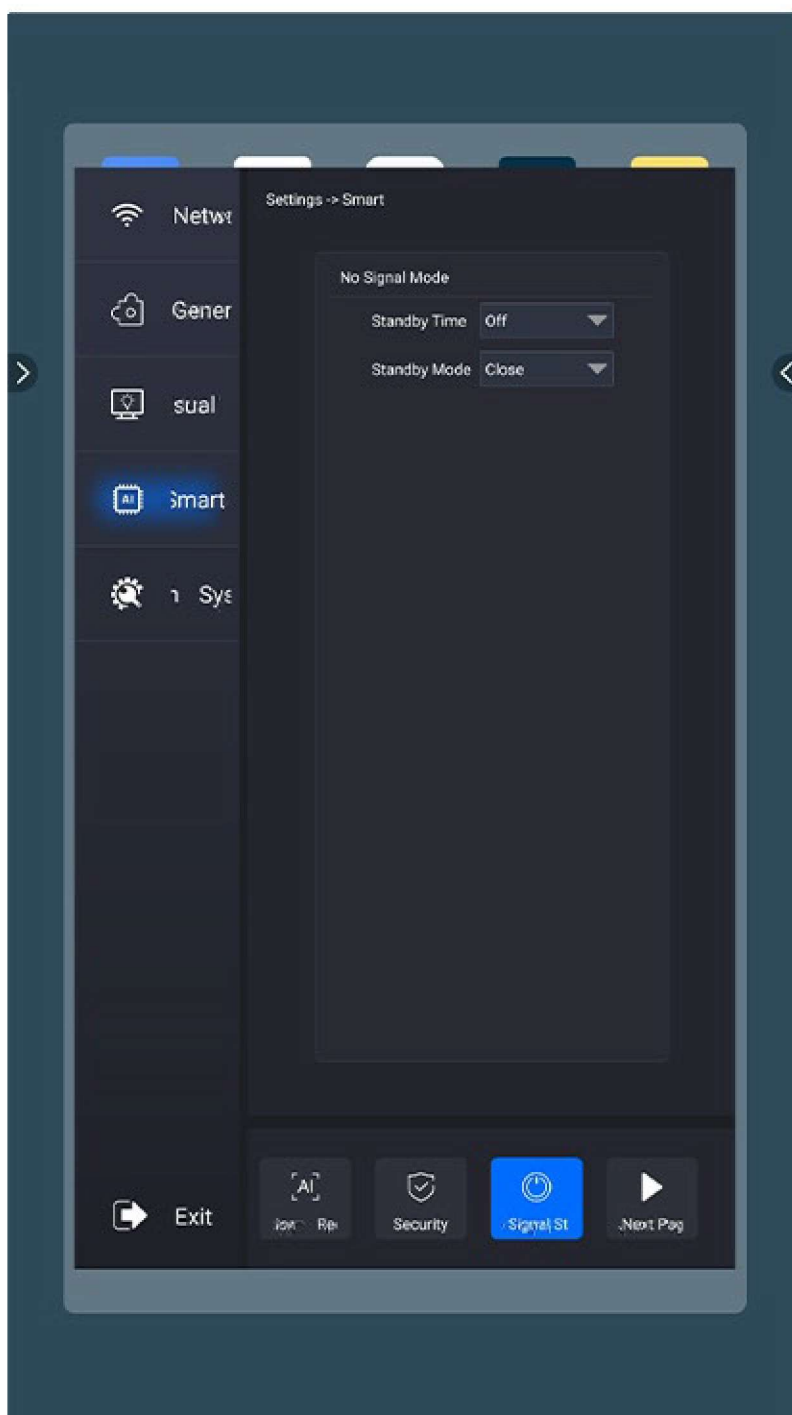

Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

 Select 'Startup' to adjust the time which the screen comes on automatically.

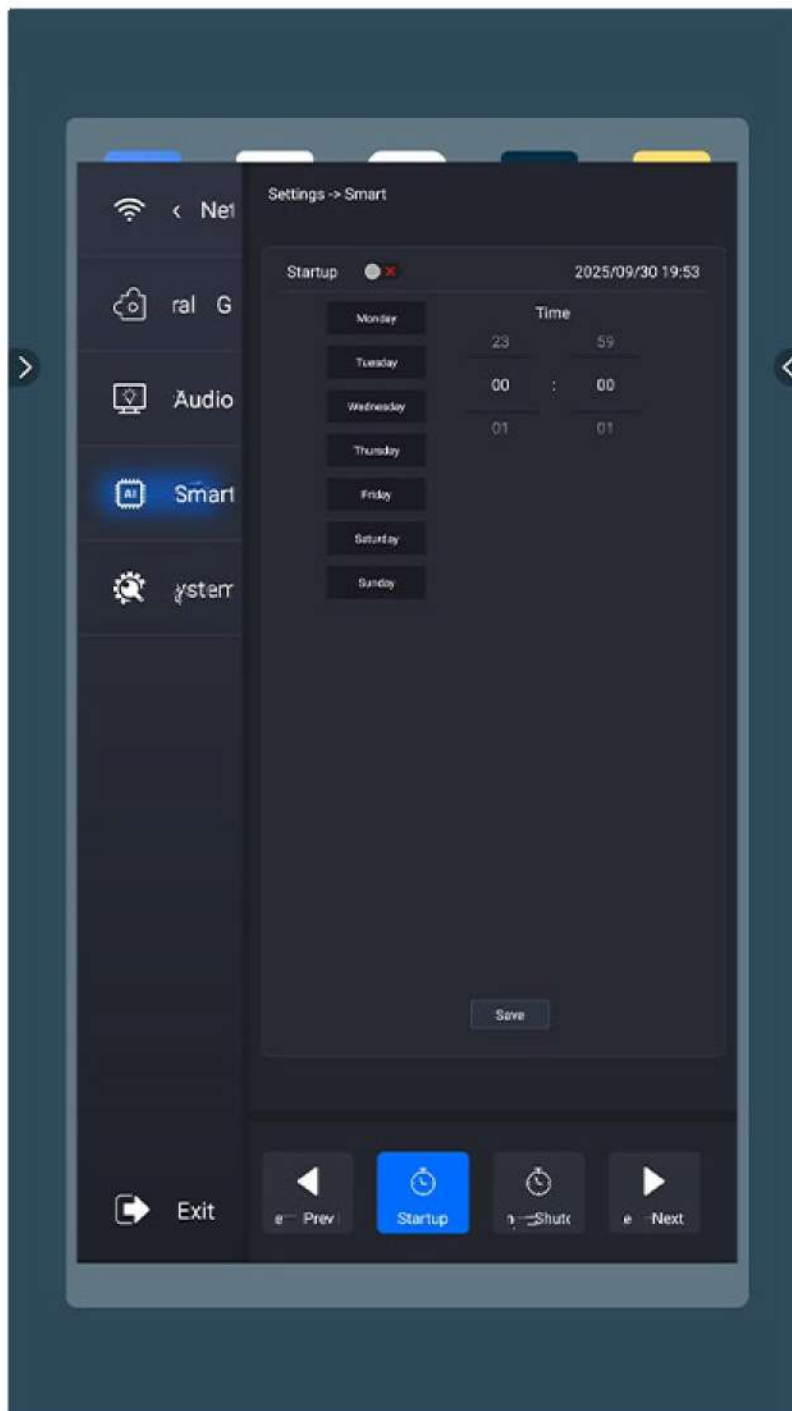

Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.

 
Select 'Shutdown' to adjust the time which the screen goes off automatically.



Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fourth row in the column on the left to select the Smart settings. Along the bottom of the screen, there are different options to choose from in the Smart section.


Select 'Boot-up play' to toggle video autoplay on boot. You will need to place the video into the AutoPlay folder within the File Explorer app.

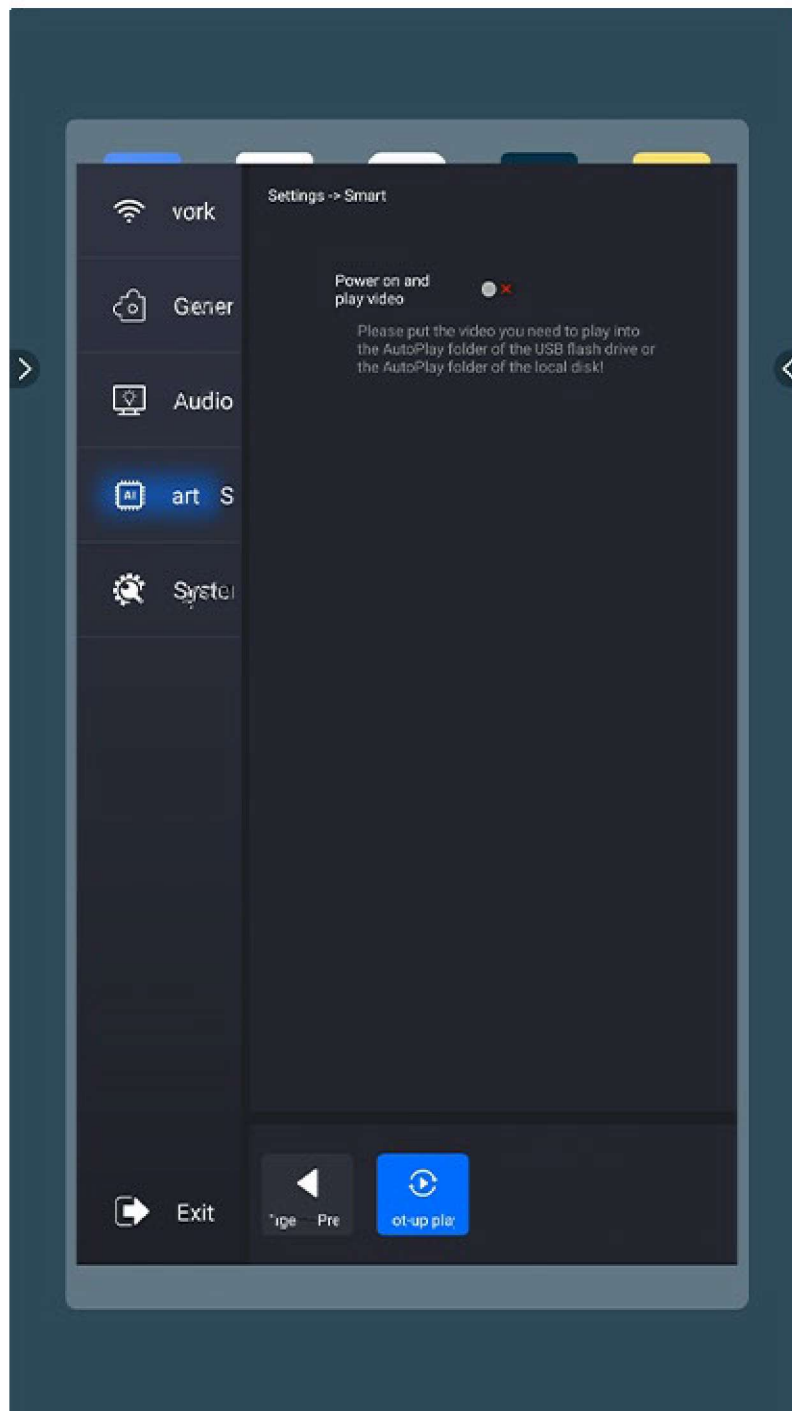

Settings - Smart

Tapping "Settings" will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

 
Select 'About' to view device information.

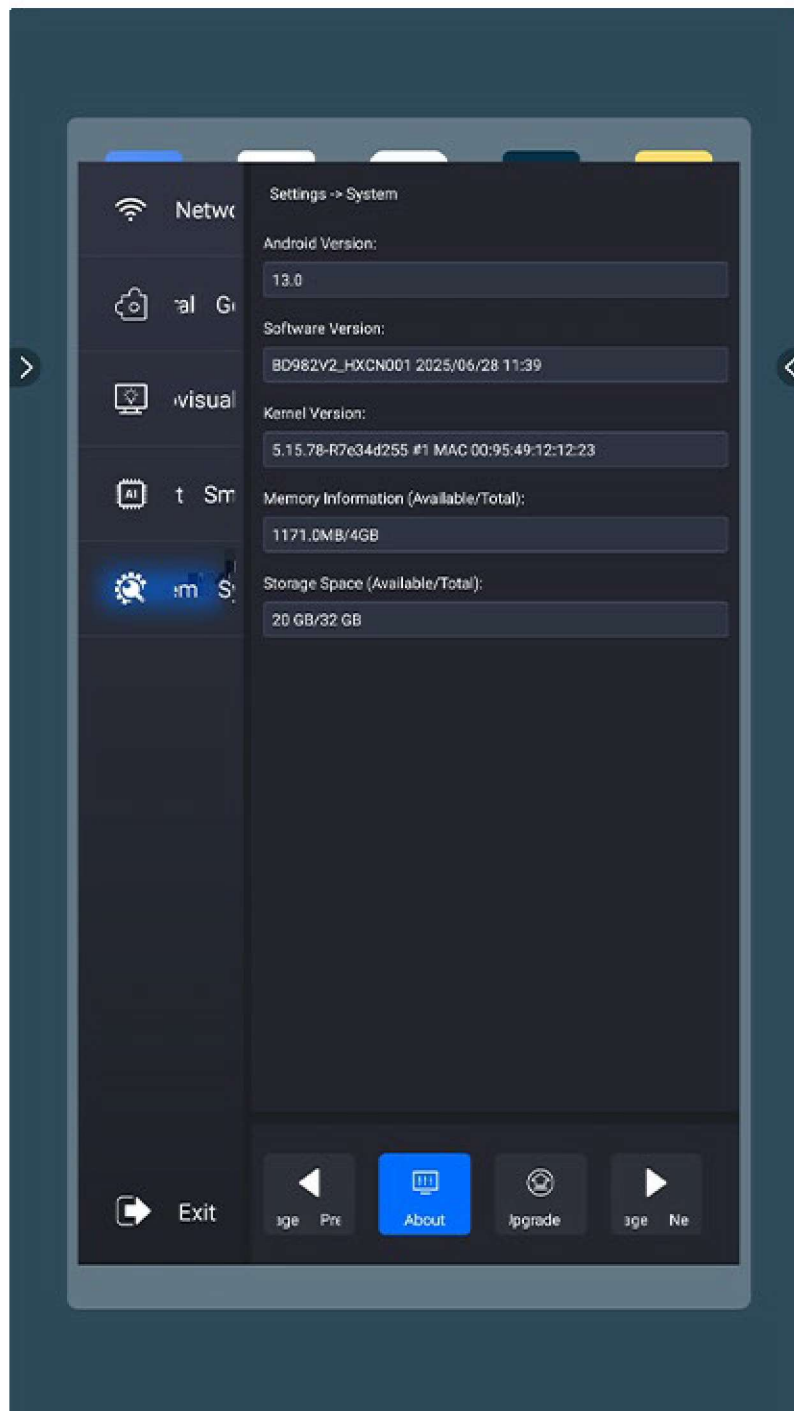

Settings - System

Tapping "Settings" will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

 
Select 'Input' to switch between an on screen keyboard and the remote controller..

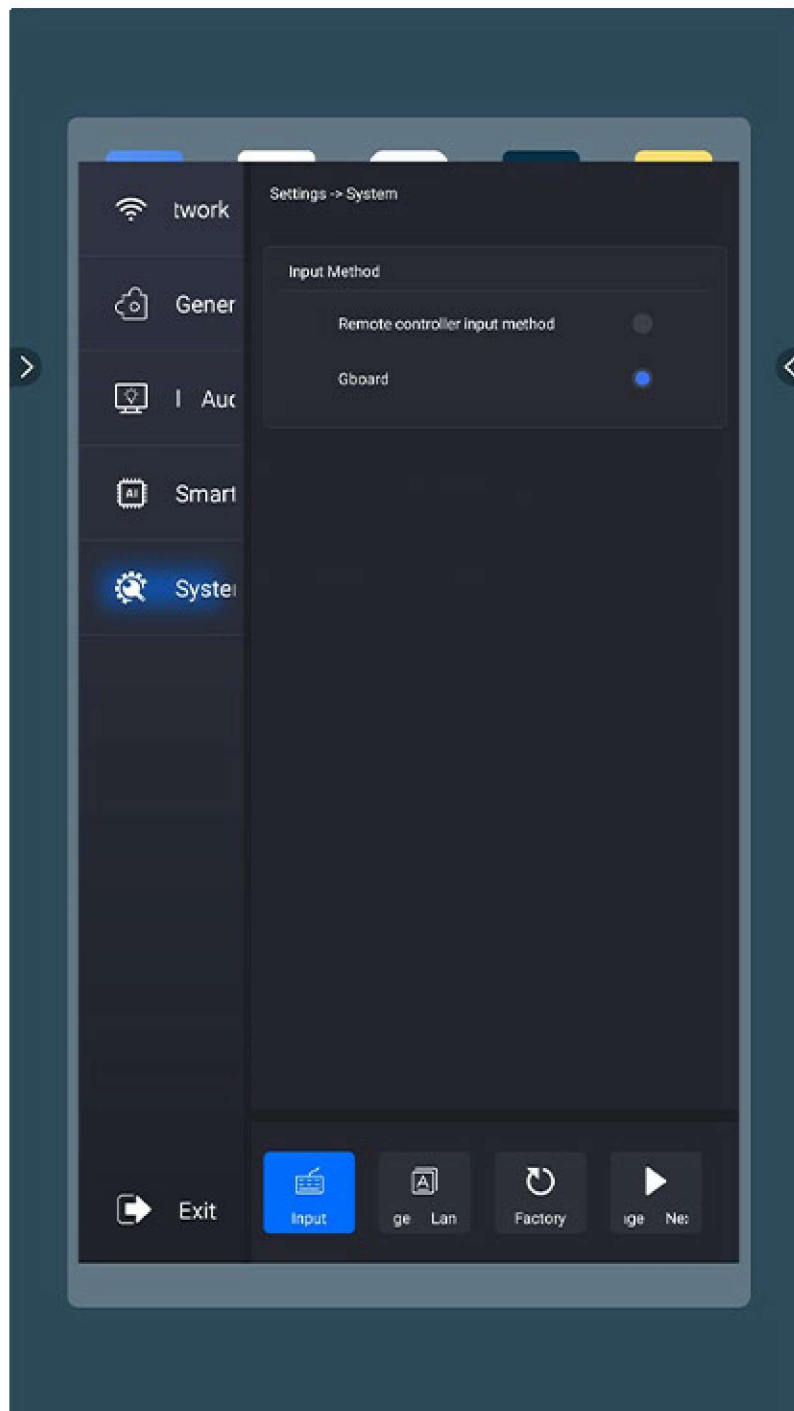

Settings - System

Tapping "Settings" will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

 
Select 'System Functions' to change the power-up mode, and change the OPS PC auto-boot settings.

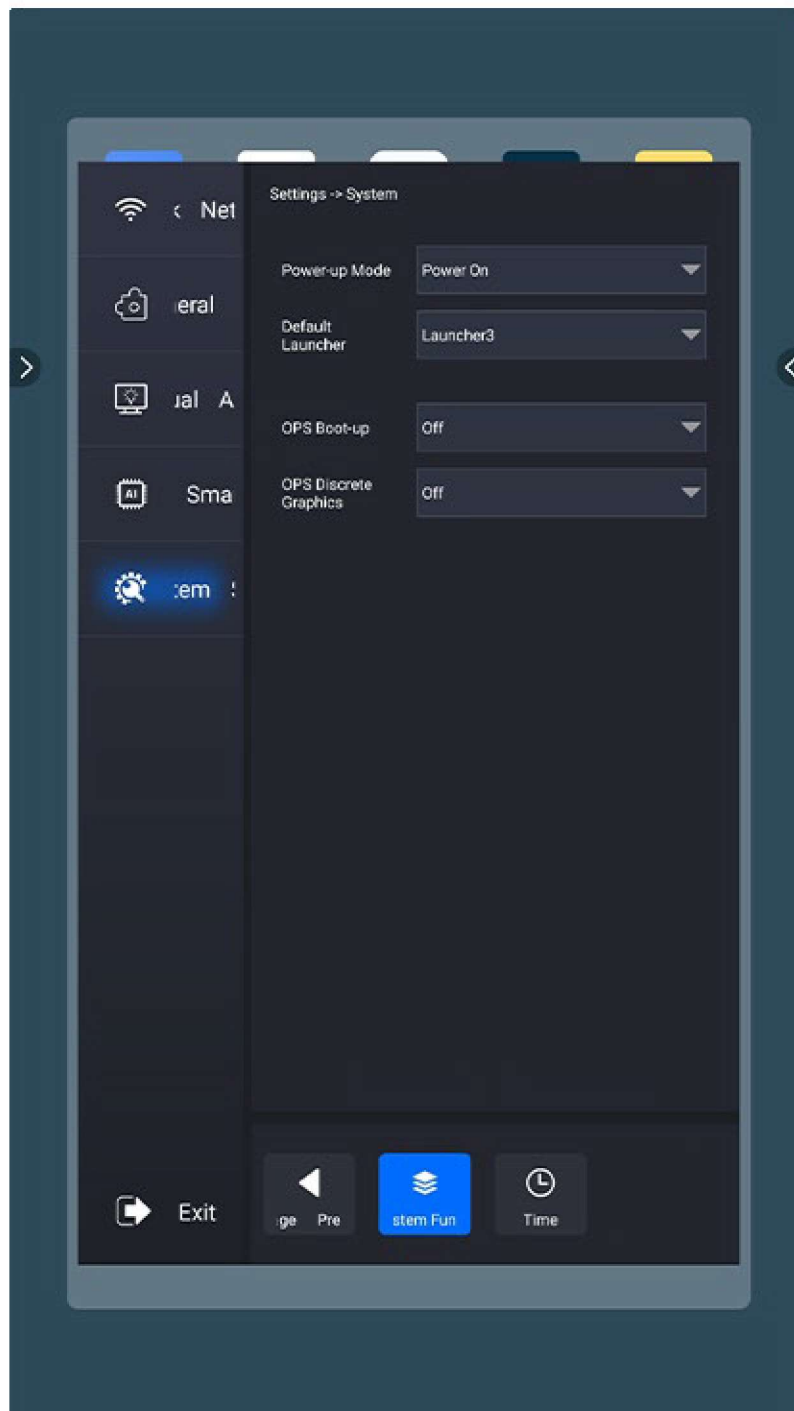

Settings - System

Tapping "Settings" will take you to this menu. Tap the fifth row in the column on the left to select the System. Along the bottom of the screen, there are different options to choose from in the System section.

 Select 'Time' to change the date, time and time zone.

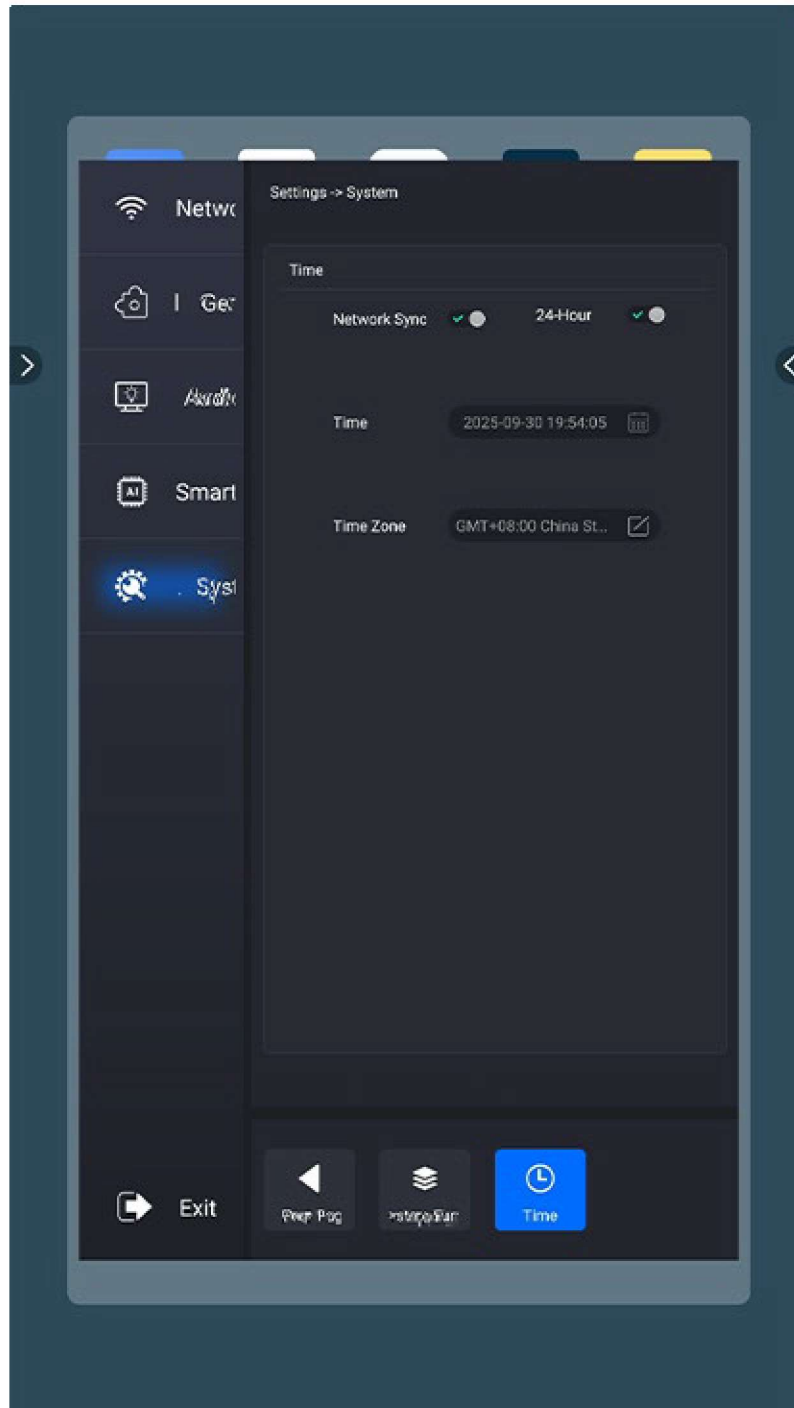


File Explorer - Overview

Tapping "File Explorer" will take you to this menu. In the column on the left, you will see different file types, as well as 'all'. Tap on a row to navigate to its contents.

NOTE: Putting a video in the "AutoPlay" folder and then toggling on AutoPlay will cause the totem to only play that video.


NOTE: If inserting a USB stick, ensure it is in one of the two USB ports on the back of the totem to the right. This will then appear underneath "Local Disk".

 Hold on a file to access the different options.

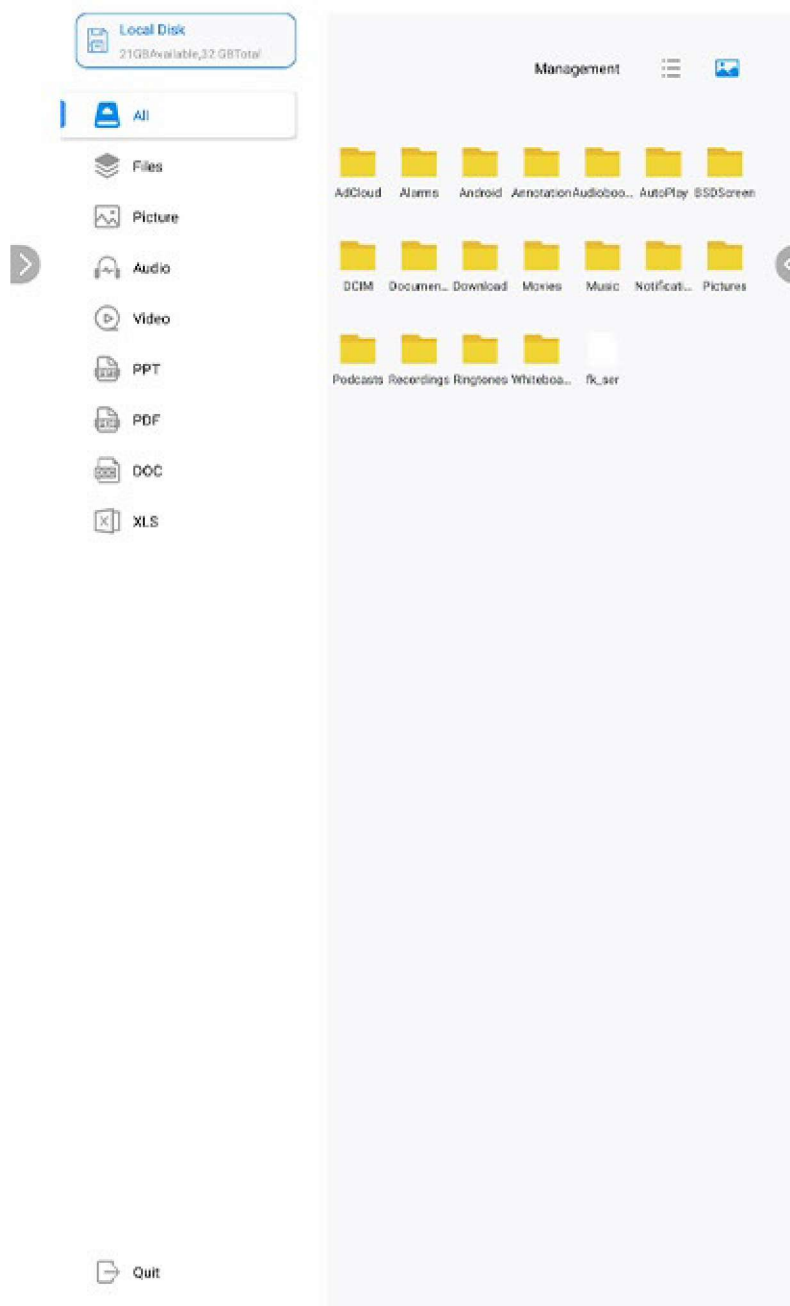

Side Menu

 Tapping one of the arrows on either side of the screen will bring up this menu. This can be hidden within the settings menu (Settings > General > More).

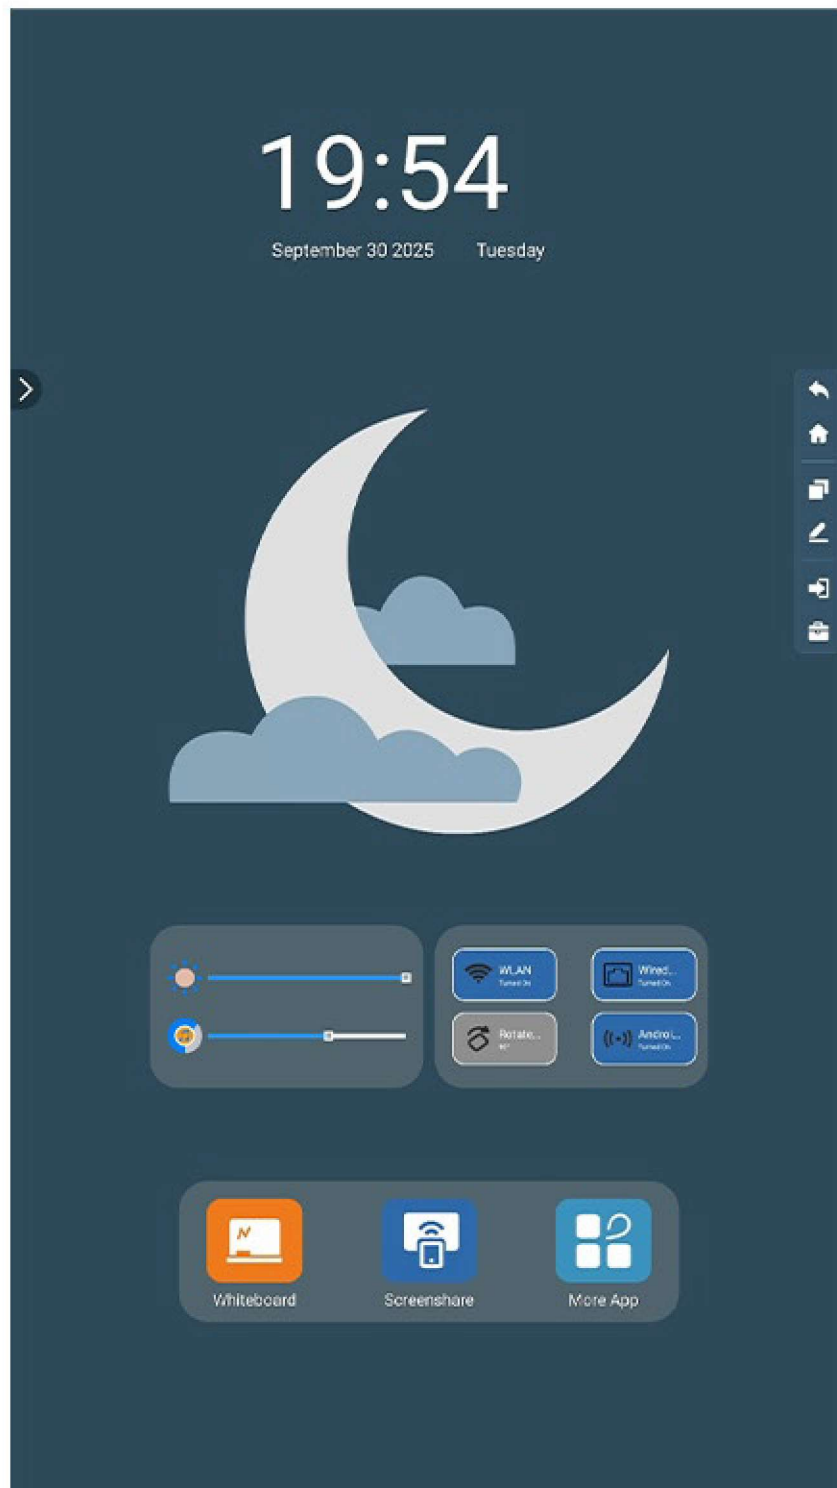

- Go back
- Return to home
- View all open apps
- Annotate
- Select a source
- Advanced menu

Advanced Side Menu

Tapping on the briefcase icon on the simple side menu will bring up this advanced side menu. From here, you can choose two apps to split screen, add a child lock, turn the screen off, take a screenshot, start a screen recording, magnify a section of the screen, set a timer, access the camera (disabled for this totem), and add more apps to this section. You can also adjust the brightness and volume from here, turn the totem off, switch to PC, and access the settings menu.

NOTE: The default password for the childlock is 2580 or 0000.

